

COOKS
professional



Popcorn Maker Instruction Manual

Product Code: G3453

After Sales Support
care@cooksprofessional.co.uk

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.

REGISTER NOW FOR EXTENDED 2-YEAR WARRANTY

When you buy direct from the Cooks Professional website your free 2-year warranty is automatically applied upon purchase (no further action required).

If you purchased your product through a different retailer website you can register your product for an extended 2-year warranty by visiting **www.cooksprofessional.co.uk/extended-warranty** or scan the QR code.





INTRODUCTION

Congratulations

You have made an excellent choice with the purchase of this quality Cooks Professional retro edition product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards, performance and safety.

We want you to be completely satisfied with your purchase, so this Cooks Professional retro edition product is backed by our full 12 month manufacturer's guarantee and an outstanding after sales service through our dedicated Helpline.

We hope you enjoy using your purchase for many years to come.

Safety warnings and general information

- Use this appliance only in accordance with the instructions.
- Before cleaning and when not in use, unplug from the mains power supply.
- To prevent anyone from tripping over the power cable, make sure that it is not draped over the worktop.
- Never place the appliance on or near a warm hotplate or other source of heat.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
- The appliance should only be repaired by a qualified electrician. Never try to repair it yourself.
- This appliance must never be operated via an external timer or separate remote-control system.
- Always use the original power cable supplied with the appliance.
- Make sure that the voltage on the rating label matches the mains power supply.
- If the power cable is damaged, it must be replaced by a qualified professional to avoid a hazard.
- Make sure that the appliance and the power cable do not come into contact with sources of heat, such as a cooker top or naked flame.
- Make sure that the power cable and plug do not come into contact with water.
- Never use the appliance outdoors.
- Place the appliance on a flat, stable, heat-resistant and splash-proof surface where it cannot fall.
- Make sure that your hands are dry when you touch the appliance, the power cable or plug.
- Do not immerse the cord, plug or cooking unit in water or any other liquid.
- Never use the appliance in humid rooms.
- If the appliance malfunctions, switch off and unplug it from the mains power supply.
- Never leave the appliance unattended when in use.
- Never move the appliance when it is switched on or is still hot. Switch off wait until it has cooled down before you move it.
- The appliance becomes very hot when in use. This appliance will cause burns if touched. Use with care!

- To prevent the risk of fire, the appliance needs space to allow heat to escape. Make sure that the appliance has sufficient space around it. Do not allow the appliance to come into contact with flammable materials. The appliance must not be covered.
- The popcorn machine is for domestic use only.
- Do not use more than one full cup of popcorn at a time as this will overload the machine.

Technical specifications

220-240V 50/60 Hz 310W

Description of parts



Before first use

- The popcorn maker only requires minimal assembly before first use.
- Position the kettle drum in the brackets and secure using the two screws, finally screw in the crank handle.*
- Ensure that the machine is clean, dry and dust free.
- Ensure silicone mat is placed neatly under kettle in base of the chamber

*note: this is reverse thread, rotate anti-clockwise to tighten.

Instructions for use

1. Position the popcorn maker on a flat, level surface.
2. Make sure that the popcorn kettle is securely in place.
3. Switch the machine on to warm up by pressing the on/off switch located on the top of the machine (you can also turn the lights on and off using a second switch located on the top of the machine).
4. Allow the machine to run for 3-5 minutes to fully heat up the kettle.



Popcorn machine on/off

Lights on/off

5. Switch the machine off.
6. Add 2/3 tablespoon of light vegetable oil to the kettle.
7. Using the measure provided add 2 oz popcorn kernels (the large side of the measuring cup).
8. Switch the Popcorn maker on, after a few moments the continuous popping action will automatically feed the popcorn out of the popcorn kettle into the main body of the machine.
9. Once the corn has finished popping turn the machine off.
10. Turn the crank handle to tip the kettle and pour out any popcorn left in the popcorn kettle.
11. Turn the popcorn machine off and allow to cool fully before putting the machine away or using it again (approximately 10-12 minutes).

Cleaning and maintenance

- Do not allow grease or oil to build up in the machine as this will cause the machine to smoke.
- Before cleaning, remove from the mains power and ensure that the machine has completely cooled.
- Clean the plastic parts of the machine with a damp cloth; never use abrasive products as they could damage the machine.

COOKS PROFESSIONAL 'HELP CENTRE'

Welcome to the Cooks Professional Help Centre!

Here, you'll find all the resources you need to make the most of your Cooks Professional products. Our online Help Centre is continually being updated with the latest product manuals, 'How to Use' and 'Hints & Tips' videos. Whether you're a first-time user or a seasoned cook, we have something for everyone.

Features:

Latest Product Manuals: Access up-to-date manuals for all our products.

How to Use Videos: Step-by-step guides to help you get started.

Hints & Tips Videos: Expert advice and creative ideas to enhance your cooking experience.

Visit us today and explore our comprehensive collection of resources. If you have any questions, our Customer Care team is available to assist you via Live Chat, email, or our contact form.

Scan here



cooksprofessional.co.uk/help-centre

PLUG WIRING

THESE SAFETY INSTRUCTIONS SHOULD BE READ CAREFULLY AND KEPT IN SAFE PLACE FOR FUTURE REFERENCE.

This appliance is fitted with a plug that complies with BS 1363. Only high quality 13A (square pin) plugs that comply with this standard should be fitted.

Wires are coloured as follows:

Brown – Live


Blue – Neutral

Yellow & Green – Earth

If the appliance is fitted with a 2-core cable it is double insulated and will not have the yellow and green earth wire.

IT IS ESSENTIAL THAT WIRES ARE ATTACHED ONLY TO THEIR DESIGNATED POSITIONS IN THE PLUG

Fuses must be replaced with the same rating as the original; please refer to the fuse rating stated on the plug for this information. Only genuine fuses compliant with BS 1362 should be used.

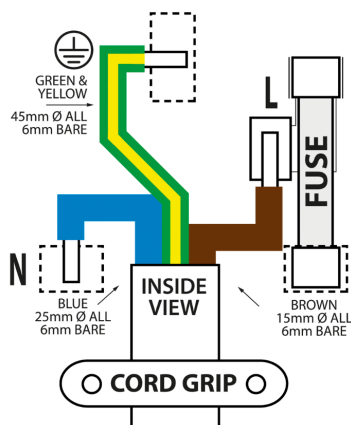

GUARANTEE IMPORTANT

Please do not return this product without first emailing our Customer Services at:

care@cooksprofessional.co.uk

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee. Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre. Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

EXTENDED 2 YEAR WARRANTY

WHEN YOU BUY DIRECT FROM THE COOKS PROFESSIONAL WEBSITE YOUR FREE 2 YEAR WARRANTY IS AUTOMATICALLY APPLIED UPON PURCHASE.

If you purchased your product through a different retailer you can register your product for an extended 2-year warranty by visiting our website www.cooksprofessional.co.uk/extended-warranty. The product must be registered, along with your contact information, within 14 days of purchase.

For full terms and conditions please visit our website.

E-mail: care@cooksprofessional.co.uk

Please retain for future reference.
Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.




Cooks Professional Limited

Unit 1
Dolbedwyn, Newchurch
Kington, Powys
HR5 3QQ
UK
care@cooksprofessional.co.uk

EU Responsible Person

(EU regulatory contact only)
eucomply OÜ
Pärnu mnt 139b-14
11317 Tallinn, Estonia
hello@eucompliancepartner.com
+33 757690241

Share your purchase with us on social media and tag
@Cooksprofessional to be featured!

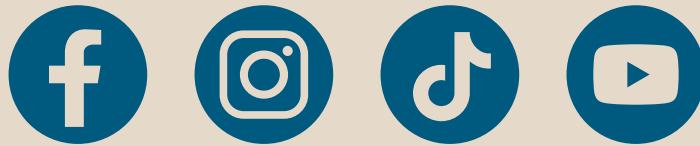

We'd like to know what you think!

We'd be very grateful if you can spare a few minutes to leave us a review.
Please review on the retailer website where you placed your order.

Need help?

Our friendly customer care team work Monday to Friday.
Message us at:

care@cooksprofessional.co.uk



Follow us on Instagram

**Popcorn Maker
G3453 Instruction Manual**

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.