



Sensor Recycling Bin Instruction Manual

Product Code: G3474 • G3475 • K274 • K275 • K278

After Sales Support
care@cooksprofessional.co.uk

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.

REGISTER NOW FOR EXTENDED 2-YEAR WARRANTY

When you buy direct from the Cooks Professional website your free 2-year warranty is automatically applied upon purchase (no further action required).

If you purchased your product through a different retailer website you can register your product for an extended 2-year warranty by visiting www.cooksprofessional.co.uk/extended-warranty or scan the QR code.



COOKS

professional

INTRODUCTION

Congratulations!

You have made an excellent choice with the purchase of this quality Cooks Professional product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards, performance and safety.

We want you to be completely satisfied with your purchase, so this Cooks Professional product is backed by our comprehensive manufacturer's guarantee and an outstanding after sales service through our dedicated Customer Care team.

We hope you enjoy using your product for many years to come.



Other colours available.



- To clean, simply wipe with a damp cloth, but do not wash the outside of the dustbin lid with excessive liquid as it is equipped with electronic components.
- Do not press down on the lid of the dustbin when it is opening.
- Avoid direct sunlight to the infrared panel.
- Do not allow children to play with this product. This is not a toy.
- Replacement of batteries must be done by an adult.
- Keep batteries out of the reach of children.
- Do not mix old and new batteries. Mixing old and new batteries could cause leakage of caustic acid that could cause skin burns and damage materials it contacts.
- Do not mix standard and rechargeable batteries.
- Only batteries of equivalent type are to be used.
- When installing batteries, observe correct polarity.
- Wear gloves and use caution when removing leaking batteries.
- When disposing of the batteries please ensure they are correctly recycled at your local recycling centre.
- Not suitable for commercial purposes.

BATTERY INSTALLATION

Use good quality AA Alkaline Batteries only

1. Open the battery compartment in the dustbin lid and insert 6 x AA batteries (not included), making sure you observe the correct polarities.
2. Replace the battery cover, ensure it is securely fitted.
3. Turn the power on with the switch on the back of the lid.

HOW TO USE THE SENSOR BIN

1. Line the top bin compartment with a 50-litre refuse sack.
2. When you want to throw something away hover your hand above the lid (approx. 15cm) it will automatically open. The lid will automatically close after 5 seconds of inactivity. If you wish to manually open the bin, simply press the button on the top of the bin.
3. If you wish to add the additional bin to the top section, simply insert the divider and place the bin into position.
4. The lower draw holds two separate bins for ease of use for recycling, this door is opened manually.

SAFETY CAUTIONS

 
Before using, please carefully read the safety checkpoints.

CAUTION

1. Not be washed with water because the electric and electronic components in the product can be cleaned by wet wipers on its surface.
2. Avoid direct casting of sunshine on the induction receiver window.
3. During the open-up process of the cover, don't press the cover with force.
4. Dismantling, repair and alteration of the product are absolutely banned.
5. When battery is going to be replaced, please change with 6 new one in same time.
6. Don't put anything on the dustbin cover.

BIN COMPOSITION

No.	Designation	Commentary
1	Cover	Automatic or semi-automatic induction opening
2	Induction window and lid opening/closing buttons	Automatic or manual open / close function
3	Removable inner bin 4 liters (Optional)	Provided with a lid + bag attachment ring, fits in the visible opening support of the lid, used for household
4	Removable inner bottom bin 25 liters	Manuel access, with handle
5	Removable tray separator	Choice to fix it into the top or the bottom 30 liters inner bin.
6	Bin body	
7	Sliding drawer on wheels	

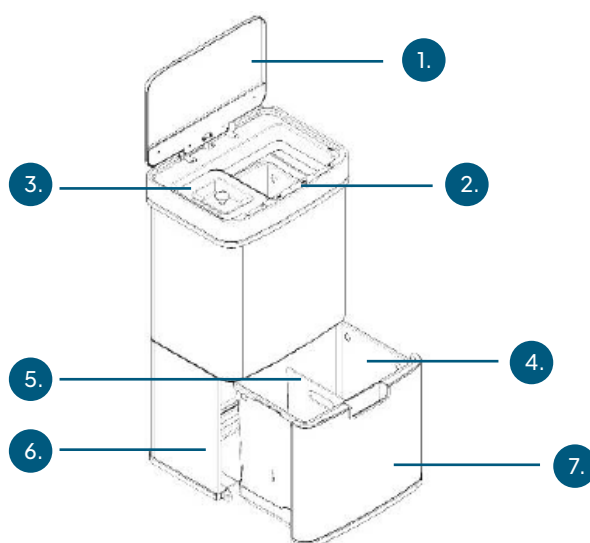



USE INSTRUCTIONS

1. Open the battery cover at the bottom of the lid and insert 6 size AA batteries according to the correct polarities, then close the battery cover.
2. Turn on the power switch on the rear cover.
3. When you need to throw the garbage out, simply hover your hand above the lid within 15 cm and it will open. The lid will soft-close after 5 seconds of inactivity. The cover will keep open, if your hand or object stays in the induction area.
4. To deal with the frequent switch of the dustbin, press the « open » button at the induction window to keep the lid open. Press the « close » button to close the lid and then the circuit resumes its automatic induction function.
5. Pull the inner bottom bin to deposit the recycled waste there. The inner top bin is used for non-recycled households wastes.
6. We advise the use of 50 liters bin liners regarding health issue and bad smell.

Available to purchase are our bespoke Biodegradable Bins Bags, check your retailer website for availability or buy direct from Cooks Professional:

Cooks Professional Biodegradable Bin Bags | 45-48L

Biodegradable and Compostable: Made from plant based materials, these bags break down naturally, offering an eco-friendly alternative to plastic and helping reduce waste.

Strong and Dependable: Built to handle household waste with ease, these bags are leak-resistant and tough.

Multi-Purpose Use: Great for kitchen waste, recycling, garden tidying and more, all whilst staying kind to the planet.

Various Pack Sizes: Packs of 25, 50 or 75 available.



GUARANTEE IMPORTANT

Please do not return this product without first emailing our Customer Services at:

care@cooksprofessional.co.uk

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee. Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre. Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

EXTENDED 2 YEAR WARRANTY

WHEN YOU BUY DIRECT FROM THE COOKS PROFESSIONAL WEBSITE YOUR FREE 2 YEAR WARRANTY IS AUTOMATICALLY APPLIED UPON PURCHASE.

If you purchased your product through a different retailer you can register your product for an extended 2-year warranty by visiting our website www.cooksprofessional.co.uk/extended-warranty. The product must be registered, along with your contact information, within 14 days of purchase.

For full terms and conditions please visit our website.

E-mail: care@cooksprofessional.co.uk

Please retain for future reference.
Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.



 
COOKS PROFESSIONAL 'HELP CENTRE'

Welcome to the Cooks Professional 'Product Help' resource centre!


Visit the Cooks Professional website and search for the product you need help with. At the bottom of the product page you'll find the 'Product Help' section.

Here, you'll find all the resources you need to make the most of your Cooks Professional products. Our online 'Product Help' resources are continually being updated with the latest product manuals, 'How to Use' and 'Hints & Tips' videos. Whether you're a first-time user or a seasoned cook, we have something for everyone.


Features:

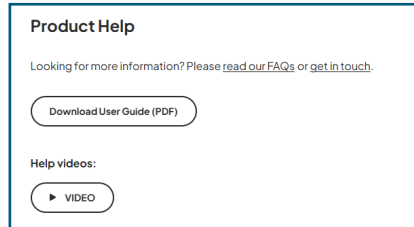

 Latest Product Manuals: Access up-to-date manuals for all our products.

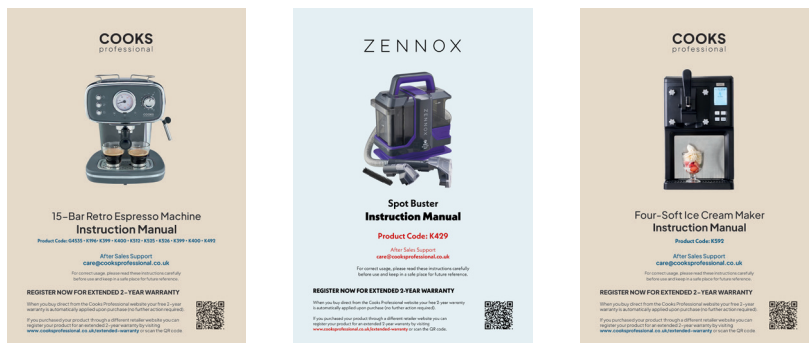

 How to Use Videos: Step-by-step guides to help you get started.

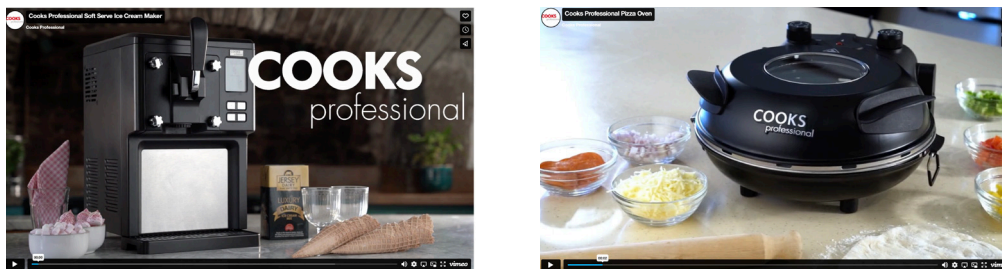

Hints & Tips Videos: Expert advice and creative ideas to enhance your cooking experience.

 
Visit us today and explore our comprehensive collection of resources. If you have any questions, our Customer Care team is available to assist you via Live Chat, email, or our contact form.

Scan here



cooksprofessional.co.uk

Share your purchase with us on social media and tag
@Cooksprofessional to be featured!

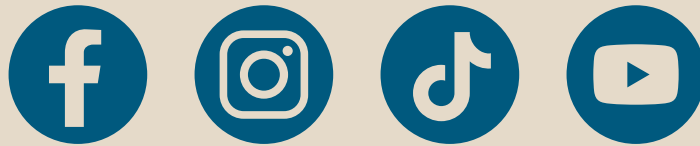

#cooksprofessional

We'd like to know what you think!

We'd be very grateful if you can spare a few minutes to leave us a review.
Please review on the retailer website where you placed your order.

Need help?

Our friendly customer care team work Monday to Friday.
Message us at:

care@cooksprofessional.co.uk



Follow us on Instagram

**Sensor Recycling Bin
G3474 • G3475 • K274 • K275 • K278 Instruction Manual**

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.