



48L Electric Oven with 2 Hot-plates Instruction Manual

Product Code: K305 • K410 • K411 • K412 • K499

After Sales Support
care@cooksprofessional.co.uk

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.

REGISTER NOW FOR EXTENDED 2-YEAR WARRANTY

When you buy direct from the Cooks Professional website your free 2-year warranty
is automatically applied upon purchase (no further action required).

If you purchased your product through a different retailer website you can
register your product for an extended 2-year warranty by visiting
www.cooksprofessional.co.uk/extended-warranty or scan the QR code.





INTRODUCTION

Congratulations!

You have made an excellent choice with the purchase of this quality Cooks Professional product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards, performance and safety.

We want you to be completely satisfied with your purchase, so this Cooks Professional product is backed by our comprehensive manufacturer's guarantee and an outstanding after sales service through our dedicated Customer Care team.

We hope you enjoy using your product for many years to come.



FOR HOUSEHOLD USE ONLY

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return the appliance to the nearest Authorised Service Centre for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven, or in a microwave oven.
9. When operating the oven, keep at least 12 cm of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use, or before cleaning. Let it to cool down before putting on or taking off parts, or before cleaning.
11. Do not cover any part of the oven with metal foil. This may cause overheating of the oven.
12. Extreme caution should be exercised when removing tray or disposing of hot grease or other hot liquids.
13. Do not clean the oven with metal scouring pads. Metal chippings would touch electrical parts, and endanger a risk of electric shock.
14. A fire may occur if the oven is covered by or placed near the flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.
15. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
16. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
17. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
18. To disconnect, turn any control to "off", then remove plug from wall outlet. Always hold the plug, but never pull the cord.
19. Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
20. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Avoid scratching door surface or nicking edges. If the door glass has a scratch or nick, contact the nearest Authorised Service Centre for examination and repair.
21. Do not use outdoors.
22. Do not use appliance for other than intended use.
23. This appliance is for HOUSEHOLD USE ONLY.
24. The accessible surfaces are liable to get hot when the appliance is operating.
25. Glass Door cannot support goods in the fully open position.

26. The appliance is not intended to be controlled by an external timer or separate remote-control system.
27. If the surface of the hotplate is cracked, switch off the appliance to avoid the possibility of electric shock. Return appliance to the nearest Authorised Service Centre for repair.
28. Caution, hot surface! The temperature of accessible surface may be high when the appliance is operation. Do not touch hot surfaces. Use handle or knobs.
29. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
30. Children should be supervised to ensure that they do not play with the appliance.
31. For appliance with type Y attachment, if the supply cord is damaged, it must be replaced by the manufacturer, its services agent or similarly qualified persons in order to avoid a hazard.
32. Rear surface of appliances should be placed against a wall.

Before using your cooker for the first time, be sure to:

1. Read all instructions included in this manual.
2. Make sure oven is unplugged and thermostat knobs are in the off position.
3. Remove all racks and pans. Wash the racks and pans in hot soapy water or in a dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new cooker.

When begin to use:

1. Confirm the marked power consumption is in conformity with your household electric power.
2. Do not let cord hang over edge of table or counter to avoid that children may stumble over.
3. If the supply cord is damaged, the oven should not be used before it is repaired.
4. Oven should be sent to the manufacturer, authorised service agent or a similarly qualified person to repair in order to avoid a hazard.

COMPONENTS



Big Ceramic Hotplate (D220mm): Suitable for all appropriately sized ceramic hob compatible cookware.

Small Ceramic Hotplate (D165mm): Suitable for all appropriately sized ceramic hob compatible cookware.

Control Panel: Temperature Knob, Big Ceramic Hotplate Knob Small Ceramic Hotplate Function Knob, Big Hotpot Indicator, Small Hotplate Indicator, Oven Power.

Oven Shelf / Grill Rack: Note: Wire Rack should be positioned with the indentations pointing down.


Food Tray: Purpose designed roasting tray.

Food Tray Handle: Allows you to pick up Food Tray and Grill Rack to avoid any scald.

Door handle: Cool handle to avoid any scald.

Glass Door: Transparent tempered glass allows you to view the cooking process conveniently.

CONTROL PANEL

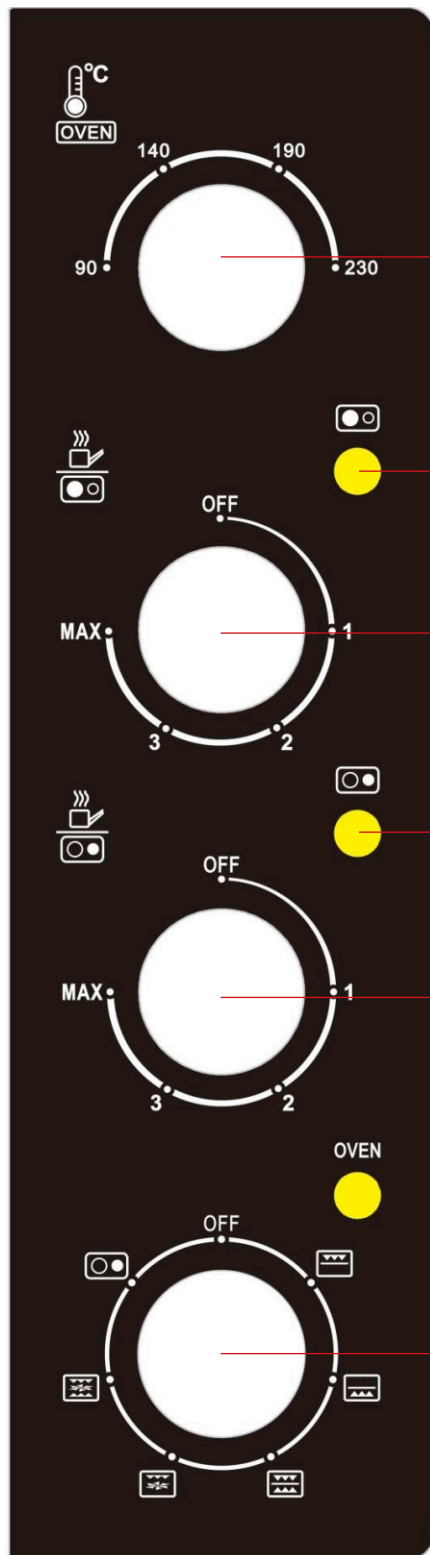

Temperature Knob:

Temperature range from 90 to 230°C.

Big Hotplate Indicator

Big Ceramic Hotplate Knob:








Temperature control for the big hotplate.

Small Hotplate Indicator

Small Ceramic Hotplate Knob:







Temperature control for the small hotplate.

Function Knob: Select Working Modes

-  Switch to "Off" when cooker not in use
-  Upper heating element only
-  Lower heating element only
-  Upper + Lower heating elements
-  Upper heating + convection
-  Dual heating + Convection
-  Small ceramic hotplate

OPERATION INSTRUCTION

Using Your Oven:

1. Plug in the power socket
2. Select cooking mode with Function Knob (     )
Note: when the oven is in use only the big ceramic hotplate will operate. Operating in this way the appliances power is distributed between the oven and the big hotplate.
3. Use ceramic hotplate knobs to adjust the temperature of the big hotplate and small hotplate. To operate the small hot plate the bottom 'Function knob' needs to be turned to the small hotplate symbol. **Note: both hotplates can only be used at the same time when the oven is not in use.**
4. Use the oven temperature knob to select your desired temperature for the oven.
5. Place the food on grill rack or Food tray and close the oven door.
 - Do not use any paper or plastic containers in the oven.
 - Use Food tray for any food that is small in size or likely to drip while cooking.
6. Place the food evenly on the grill rack.
7. Set the cooking function and desired temperature.
8. When cooking is finished, turn the function knob and big ceramic hotplate knob to "OFF".
9. Use food tray handle or oven mitts to remove hot food to avoid any scalding.
10. Remove the power plug from the socket after cooking.

Using Your Ceramic Hotplate

Ceramic Hotplate can be used for all suitable cookware that is the appropriate size for the hobs.

Note: The weight of the food which is put on the Food Tray/Grill Rack can not be over 3.5kg.

CAUTION

TO AVOID RISK OF INJURY OR BURNS, DO NOT TOUCH HOT SURFACES WHEN OVEN IS IN USE. ALWAYS PAY EXTREME CARE WHEN REMOVING BAKE TRAY, WIRE RACK OR ANY HOT CONTAINER FROM A HOT OVEN. ALWAYS USE THE TRAY HANDLE, OR AN OVEN MITT WHEN REMOVING HOT ITEMS FROM THE OVEN.

CARE & CLEANING

ALWAYS UNPLUG OVEN AND ALLOW TO COOL BEFORE CLEANING

Your oven features a quick-clean coating. If desired, wipe walls with damp cloth. Do not use steel wool scouring pads, abrasive cleaners or scrape walls with metal utensils as this may damage the quick-clean interior. Wash all accessories in hot sudsy water or in a dishwasher. Wipe the door clean with a damp cloth and wipe dry with a paper or cloth towel.

SPECIFICATIONS

Power Consumption:	230V~ 50/60Hz
Total Output Power:	3300W
Big Hotplate(D220) Output:	1500W
Medium Hotplate(D165) Output:	1000W
Oven Output:	1800W
Oven Capacity:	48Litres

NOTICE ABOUT RECYCLING

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!



PLUG WIRING

THESE SAFETY INSTRUCTIONS SHOULD BE READ CAREFULLY AND KEPT IN SAFE PLACE FOR FUTURE REFERENCE.

This appliance is fitted with a plug that complies with BS 1363. Only high quality 13A (square pin) plugs that comply with this standard should be fitted.

Wires are coloured as follows:


Brown – Live

Blue – Neutral

Yellow & Green – Earth

If the appliance is fitted with a 2-core cable it is double insulated and will not have the yellow and green earth wire.

IT IS ESSENTIAL THAT WIRES ARE ATTACHED ONLY TO THEIR DESIGNATED POSITIONS IN THE PLUG

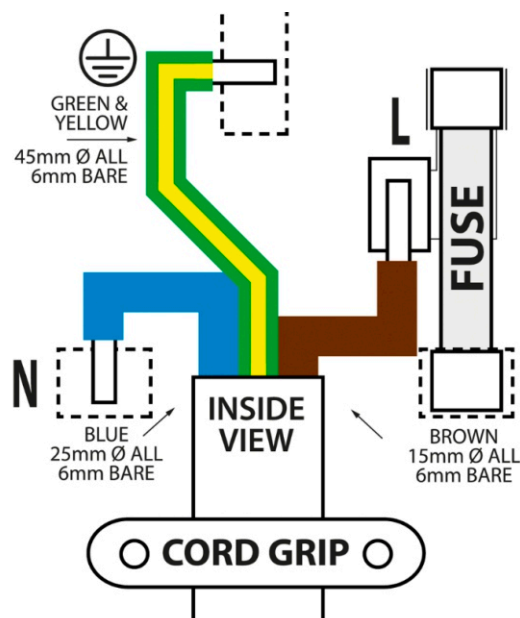

Fuses must be replaced with the same rating as the original; please refer to the fuse rating stated on the plug for this information. Only genuine fuses compliant with BS 1362 should be used.

GUARANTEE IMPORTANT

Please do not return this product without first emailing our Customer Services at:

care@cooksprofessional.co.uk

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee. Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre. Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

EXTENDED 2 YEAR WARRANTY

WHEN YOU BUY DIRECT FROM THE COOKS PROFESSIONAL WEBSITE YOUR FREE 2 YEAR WARRANTY IS AUTOMATICALLY APPLIED UPON PURCHASE.

If you purchased your product through a different retailer you can register your product for an extended 2-year warranty by visiting our website www.cooksprofessional.co.uk/extended-warranty. The product must be registered, along with your contact information, within 14 days of purchase.

For full terms and conditions please visit our website.

E-mail: **care@cooksprofessional.co.uk**

Please retain for future reference.
Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.



More great products from Cooks Professional



Pizza Maker



Hot Water Dispenser



Sensor Recycling Bin



Espresso Maker



Electric Can Opener



Bamboo Chopping Boards



Air Fryer



Storage Tins



Electric Salt and Pepper Mills

Kitchen inspiration

Share your purchase with us on social media and tag
@cooksprofessional to be featured!



#cooksprofessional

We'd like to know what you think!

We'd be very grateful if you can spare a few minutes to leave us a review.
Please review on the retailer website where you placed your order.

Need help?

Our friendly customer care team work Monday to Friday.
Message us at:

care@cooksprofessional.co.uk



Follow us on Instagram

48L Electric Oven with 2 Hot-plates
K305 • K410 • K411 • K412 • K499 Instruction Manual

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.