



Dual Air Fryer Instruction Manual

Product Code: K216 • K264

After Sales Support
care@cooksprofessional.co.uk

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.



INTRODUCTION

Congratulations!

You have made an excellent choice with the purchase of this quality Cooks Professional product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards, performance and safety.

We want you to be completely satisfied with your purchase, so this Cooks Professional product is backed by our comprehensive manufacturer's guarantee and an outstanding after sales service through our dedicated Customer Care team.

We hope you enjoy using your product for many years to come.



GENERAL INFORMATION AND SAFETY WARNINGS

- Use this appliance only in accordance with the instructions.
- Before plugging into the mains power supply, check the domestic voltage corresponds to the rating label of the appliance.
- This appliance must never be operated via an external or separate remote-control system.
- Always use the original power cable supplied with the appliance.
- The use of accessory attachments that are not recommended by the manufacturer may cause injuries.
- Always remove the plug from the mains power supply before assembling or disassembling, cleaning or storing or if the appliance malfunctions.
- Make sure that the power cable and plug do not come into contact with water.
- Make sure that your hands are dry when you touch the appliance, the power cable or the plug.
- Do not immerse the cord, plug or appliance motor unit in any liquid.
- Never place the appliance on or near a warm hotplate or other source of heat.
- Caution is needed when opening the appliance as internal surfaces and the exposed heating element in the lid can be extremely hot.
- Place the appliance on a flat, stable, heat-resistant and splash-proof surface where it cannot fall.
- Allow the appliance to cool before cleaning and storing.
- Do not place on or near a hot gas or electric burner, or near or in a hot oven.
- Never move the appliance when it is switched on.
- To prevent anyone from tripping over the power cable, make sure that it is not draped over the worktop.
- Do not use appliance for anything other than the intended use.
- Do not use outdoors or for commercial purposes.
- Never use a damaged appliance. If the power cable is damaged or your appliance has malfunctioned, please contact our Customer Care team or take it to your local electrical store for repair. The appliance should only be repaired by a qualified technician, never try to repair it yourself.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never leave the appliance unattended when in use.
- To prevent the risk of fire, the appliance needs space to allow heat to escape. Make sure that the appliance has sufficient space around it and does not come into contact with flammable materials. The appliance must not be covered.

WARNING: THIS APPLIANCE MUST BE EARTHED.



INSTRUCTIONS FOR USE

BEFORE FIRST USE

- STEP 1:** Before connecting the air fryer to the mains power supply, wipe the air fryer main unit with a soft, damp cloth and dry thoroughly.
- STEP 2:** Clean the non-stick coated cooking trays and the cooking compartments in warm, soapy water, then rinse and dry thoroughly.
- STEP 3:** Place the air fryer main unit onto a stable, heat-resistant surface, at a height that is comfortable for the user.

BEFORE FIRST USE

When the air fryer is switched on for the first time, you may detect an unusual odour. This is quite normal and will disappear after a few minutes of use. It is recommended to run the air fryer for around 10 minutes before cooking food in it. This will burn off any lubricants from the oven's heating elements and will prevent the initial smoke odour from tainting the taste of food.


ASSEMBLING THE DUAL AIR FRYER

- STEP 1:** Fit the non-stick coated cooking trays into the cooking compartments, checking that they are seated securely.
- STEP 2:** Slide the cooking compartments into the air fryer main unit, checking that the cooking compartment numbers match the display numbers.

NOTE: The cooking compartments should always be closed securely before use, as not doing so will prevent the air fryer from working.

CONTROL PANEL INSTRUCTIONS FOR USE

Plug in and switch on the mains power supply. The unit will emit a beep and the power button will illuminate to indicate that the unit is being powered. Switch on the air fryer by tapping the power button with your finger.

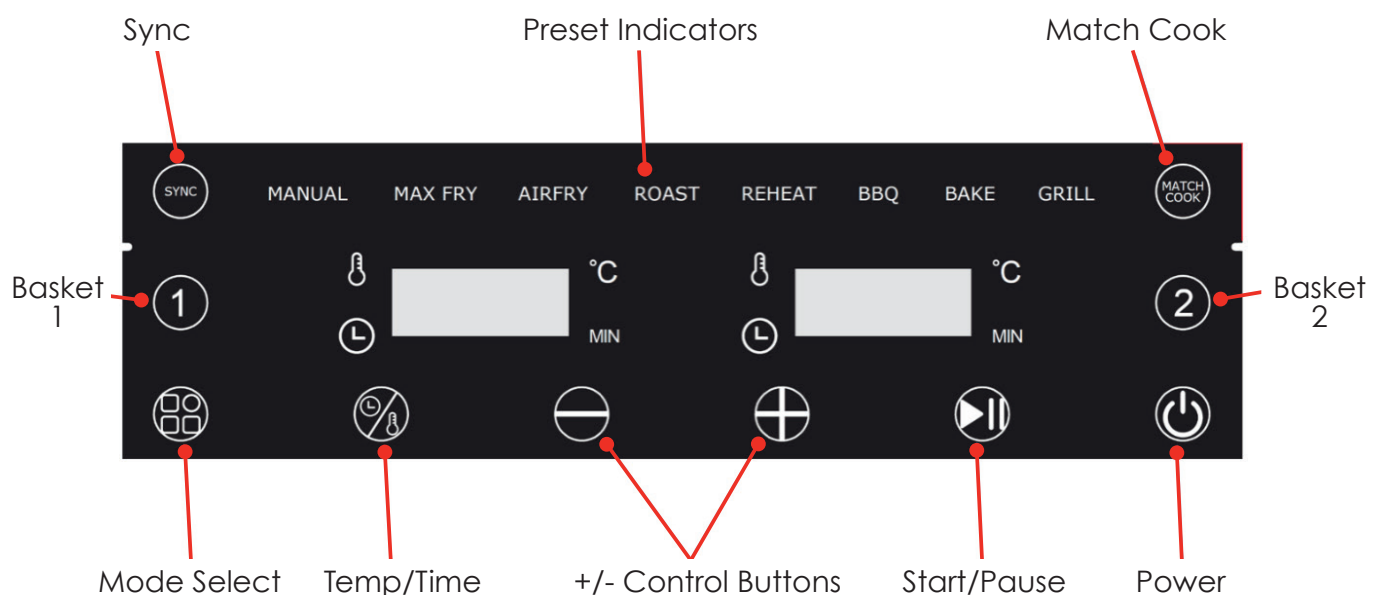

PRESET COOKING FUNCTIONS

Mode	Temperature Guide	Time Guide
Manual	60-200	1-60 mins
Max Fry	200	20 mins
Air Fry	180	9 mins
Roast	180	17 mins
Reheat	180	17 mins
Bake	160	18 mins
BBQ	200	20 Mins
Grill	160	10 mins

STEP 1: First select the desired compartment number you wish to cook in, by tapping 1 or 2.

STEP 2: Use the mode button to automatically cycle between time and temperature presets for various cooking functions. Please note the preset temperature and time can be adjusted using the + / - control buttons as required. Press and hold down the buttons in order to quickly adjust the time or temperature + / -.

STEP 3: Press the start/pause button to commence cooking. Once the preset cooking time has elapsed, the timer will sound and the air fryer will switch off.

NOTE: During the cooking cycle, both the time and temperature can be adjusted at any time by tapping the drawer number and using the time/temperature button and the + / - control buttons as required.

If one of the cooking compartment drawers opened/removed during cooking, cooking will be paused; reinsert the cooking compartment for cooking to resume.
Press and hold the power button to switch off the air fryer,

HOW TO USE THE 'SYNC' COOKING FUNCTION

When cooking different foods in each compartment that require different cooking times and temperatures, simply use the 'Sync' setting so that both compartments finish cooking at the same time.

STEP 1: Tap '1' and set the required temperature/time settings for cooking compartment 1, following the instructions in the section entitled 'Preset Cooking Functions'.

STEP 2: Tap '2' and repeat for cooking compartment 2.

STEP 3: Press the 'Sync' button; the button will illuminate to signal that the setting has been selected.

STEP 4: Press the start/pause button to begin cooking.

HOW TO USE THE 'MATCH' COOKING SETTING

Use the match setting when cooking the foods that require the same cooking temperature and time. Both compartments will finish cooking at the same time.

STEP 1: Tap '1' and set the required temperature/time settings for compartment 1, following the instructions in the section above 'Control Panel Instructions for use'.

STEP 2: Press the 'Match' button; the button will illuminate to signal that the setting has been selected. Cooking compartment 2 will switch on.

STEP 3: Press the start/pause button to commence cooking in both compartments simultaneously

NOTE: Whilst the Air Fryer is plugged in the power button will remain illuminated.

USING THE AIR FRYER

STEP 1: Plug in and switch on the air fryer at the mains power supply; the air fryer will beep and the power button will illuminate to indicate that the unit is plugged in.

STEP 2: Tap the power button to switch on the air fryer, the air fryer is now ready to be programmed for cooking.

STEP 3: Tap the 'Manual' button and follow the instructions in the section entitled 'Control Panel Instructions for Use'. Use the time/temperature button and the + / - control buttons to increase or decrease the time or temperature as required.

STEP 4: Once preheated, remove the cooking compartment(s). Position the cooking compartment(s) onto a flat, stable, heat-resistant surface.

STEP 5: Place the ingredients into the non-stick coated cooking tray(s) inside the cooking compartment(s) and then carefully slide the cooking compartment(s) back into the air fryer main unit.

STEP 6: Use the digital control panel to set the cooking time and temperature as required for the ingredients in each compartment. Time and temperature settings can also be set using the various preset cooking function buttons. These presets can then be adjusted using the time and temperature control buttons as required.

STEP 7: Some foods may require shaking halfway through the cooking time to ensure they cook evenly. Remove the cooking compartment(s) from the air fryer main unit. Shake the cooking compartment(s) gently and then carefully slide back into the air fryer main unit to continue cooking.

STEP 8: Once the set time has elapsed, the air fryer will beep and automatically switch off. Check whether the food is ready; if the food is not cooked, replace the cooking compartment(s) into the air fryer main unit. Use the control panel to adjust the cooking time and temperature accordingly. If the food is cooked then remove from the cooking compartment and serve.

NOTE: It is recommended to preheat the air fryer before starting to cook. If the cooking time or temperature setting needs to be changed during use, use the time and temperature control buttons, as required. The air fryer will automatically adjust the settings.

CAUTION

Do not tip the food directly into a bowl or onto a plate, as excess oil may collect at the bottom of the cooking compartment(s) and leak onto the ingredients or serving bowl. Exercise caution when opening and closing the cooking compartment(s) during use, as their air fryer will become very hot.

WARNING

Nominal voltage is still present even when the air fryer is switched off. To permanently switch off the air fryer, switch off and unplug from the mains power supply.

STORAGE

Always clean the cooking compartments after use. The inners trays are dishwasher safe. Check that the air fryer is cool and store in a dry place. Wrap the cord loosely to avoid causing damage.

SPECIFICATIONS

Product code: K216

Input: 220-240 V - 50/60 Hz

Output: 1700 W

PLUG WIRING

THESE SAFETY INSTRUCTIONS SHOULD BE READ CAREFULLY AND KEPT IN SAFE PLACE FOR FUTURE REFERENCE.

This appliance is fitted with a plug that complies with BS 1363. Only high quality 13A (square pin) plugs that comply with this standard should be fitted.

Wires are coloured as follows:


Brown – Live

Blue – Neutral

Yellow & Green – Earth

If the appliance is fitted with a 2-core cable it is double insulated and will not have the yellow and green earth wire.

IT IS ESSENTIAL THAT WIRES ARE ATTACHED ONLY TO THEIR DESIGNATED POSITIONS IN THE PLUG

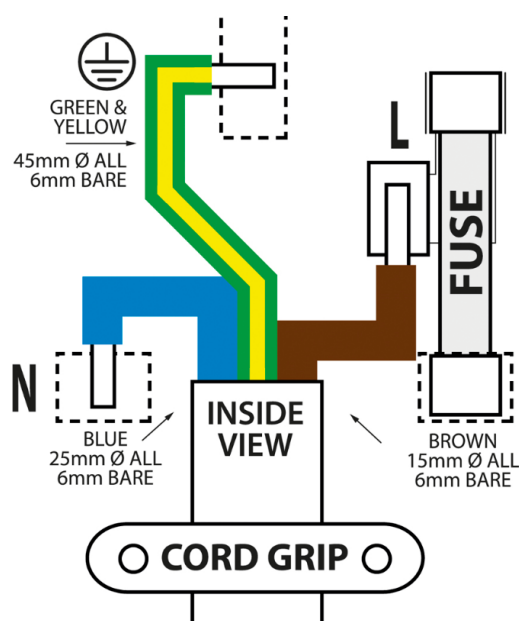

GUARANTEE IMPORTANT

Please do not return this product without first emailing our Customer Services at:

care@cooksprofessional.co.uk

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee. Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre. Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

EXTENDED 2 YEAR WARRANTY

WHEN YOU BUY DIRECT FROM THE COOKS PROFESSIONAL WEBSITE YOUR FREE 2 YEAR WARRANTY IS AUTOMATICALLY APPLIED UPON PURCHASE.

If you purchased your product through a different retailer you can register your product for an extended 2-year warranty by visiting our website www.cooksprofessional.co.uk/extended-warranty.

The product must be registered, along with your contact information, within 14 days of purchase.

For full terms and conditions please visit our website.

E-mail: **care@cooksprofessional.co.uk**

Please retain for future reference.
Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.





More great products from Cooks Professional



Pizza Maker



Hot Water Dispenser



Sensor Recycling Bin



Espresso Maker



3.5L Slow Cooker



Bamboo Chopping Boards



Ice Maker



Storage Tins



Electric Salt and Pepper Mills

Kitchen inspiration

Share your purchase with us on social media and tag
@cooksprofessional to be featured!



#cooksprofessional

We'd like to know what you think!

We'd be very grateful if you can spare a few minutes to leave us a review.
Please review on the retailer website where you placed your order.

Need help?

Our friendly customer care team work Monday to Friday.
Message us at:

care@cooksprofessional.co.uk



Follow us on Instagram

**Dual Air Fryer
K216 • K264 Instruction Manual**

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.