

COOKS
professional



Popcorn Maker

Product Code: K614

After Sales Support
care@cooksprofessional.co.uk

For correct usage, please read these instructions carefully before use and keep in a safe place for future reference.

REGISTER NOW FOR EXTENDED 2-YEAR WARRANTY

When you buy direct from the Cooks Professional website your free 2-year warranty is automatically applied upon purchase (no further action required). If you purchased your product through a different retailer website you can register your product for an extended 2-year warranty by visiting **www.cooksprofessional.co.uk/extended-warranty** or scan the QR code.





INTRODUCTION

Congratulations!

You have made an excellent choice with the purchase of this quality Cooks Professional product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards, performance and safety.

We want you to be completely satisfied with your purchase, so this Cooks Professional product is backed by our comprehensive manufacturer's guarantee and an outstanding after sales service through our dedicated Customer Care team.

We hope you enjoy using your product for many years to come.



Safety Instructions

Cables and Plugs

- Ensure your electricity supply matches the rating on the label.
- Only use the product as rated. Preferably, the socket should be protected by a Residual Current Device (RCD).
- Do not use with a damaged cable or plug. If the supply cable is damaged, it must be replaced by a qualified engineer to avoid hazards.
- Avoid using an extension cable.
- Do not handle the plug or appliance with wet hands.
- Keep the cable away from heated surfaces.
- Do not let the cable hang over the edge of a table or countertop.
- Do not pull the cable around sharp edges or corners.
- Unplug the appliance when not in use. Turn off all controls before unplugging.
- Do not unplug by pulling on the cable. Grasp the plug to unplug.
- Always unplug before performing maintenance, connecting/disconnecting attachments, or changing accessories.
- Ensure the cable is stored safely to prevent hazards.

General Precautions

- Only use the Cooks Professional Popcorn Maker for its intended purpose.
- This appliance is intended for indoor, domestic use only.
- Do not use outdoors or in commercial environments.
- This appliance should not be used by children or persons with reduced physical, sensory, or mental capabilities without supervision.
- If the Popcorn Maker is malfunctioning, damaged, or has been dropped, do not use it. Contact Cooks Professional Customer Services.
- Do not use the Popcorn Maker if any parts are missing or damaged.
- Ensure all parts are securely attached before use.

Risk of Personal Injury

- Place the appliance on a firm, flat, heat-resistant surface away from the edge of the worktop.
- Do not operate with an external timer or remote-control system.
- Do not exceed the maximum capacity. Only use the recommended amount of kernels.
- Never add butter directly to the Popping Chamber.
- The appliance may emit a 'new' smell or vapor during the first use, which will dissipate after a few uses.

- The appliance becomes hot during use. Avoid touching the surface during operation.
- Do not insert objects into openings or cover the appliance.
- Keep hair, loose clothing, and body parts away from openings and moving parts.
- Do not lift or move the Popcorn Maker while in use.
- Do not leave the appliance unattended during operation.
- Do not operate continuously for extended periods. Allow 10-15 minutes between uses to cool.

Specifications

- Voltage: 220-240V
- Rated Power: 1200W
- Frequency: 50Hz

Before First Use

- Remove all packaging and labels.
- Inspect the product for damage and ensure all parts are included.
- Wash the Top Cover/Chute with warm water and mild detergent, then dry thoroughly.
- Wipe the Measuring Cap/Lid with a damp cloth and ensure it is dry before use.
- Wipe the Base Unit with a clean, damp cloth. Do not immerse the Base Unit, cord, or plug in water.

Operation

1. Place the Base Unit on a stable, level, heat-resistant surface.
2. Attach the Top Cover/Chute to the Base Unit securely.
3. Measure 30g (1.5oz) of kernels using the Measuring Cap/Lid.
4. Pour the kernels into the Popping Chamber. Do not add any other ingredients.
5. Place the Measuring Cap/Lid on the Top Cover/Chute and position a large bowl under the Chute.
6. Connect the Popcorn Maker to the mains and switch it on.
7. Once the popcorn starts popping, it will emerge through the Chute. Turn off the appliance once the popping stops.
8. Allow the unit to cool for at least 10 minutes before starting another batch.

Cleaning & Maintenance

- Remove and wash the Measuring Cap/Lid and Top Cover/Chute with warm, soapy water. Dry thoroughly.
- Wipe the Base Unit with a slightly damp cloth. Do not use abrasive materials.
- Use a dry, soft cloth to clean the Popping Chamber.
- Ensure the appliance is unplugged and cool before cleaning.

Hints & Tips

- For buttery popcorn, melt butter separately and drizzle over the popcorn.
- Try drizzling with caramel, melted chocolate, or sprinkling with cheese and chives for different flavours.
- Store opened kernels in an airtight container in a cool, dry place to keep them fresh.

Troubleshooting

Problem: Popcorn Maker Cuts Out

- Avoid continuous or excessive use to prevent overheating. Allow the appliance to cool between uses.

Problem: Kernels Are Not Being Popped

- Ensure the correct amount of kernels is used. Do not exceed one Measuring Cap/Lid per session.

Disposal Information

- Recycle where facilities exist. Check with your local authority for recycling advice.

Copyright

- All materials in this instruction manual are copyrighted by Cooks Professional.
- Unauthorised use may violate worldwide copyrights.





GUARANTEE

Please do not return this product without first emailing our Customer Services at:

care@cooksprofessional.co.uk

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee. Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre. Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

EXTENDED 2 YEAR WARRANTY

WHEN YOU BUY DIRECT FROM THE COOKS PROFESSIONAL WEBSITE YOUR FREE 2 YEAR WARRANTY IS AUTOMATICALLY APPLIED UPON PURCHASE.

If you purchased your product through a different retailer you can register your product for an extended 2-year warranty by visiting our website www.cooksprofessional.co.uk/extended-warranty.

The product must be registered, along with your contact information, within 14 days of purchase.

For full terms and conditions please visit our website.

After Sales Customer Service:

E-mail: **care@cooksprofessional.co.uk**

Please retain for future reference. Colours and contents may vary.

More great products from Cooks Professional



Pizza Maker



Hot Water Dispenser



Dual Air Fryer



Mini Oven



3.5L Slow Cooker



Espresso Maker



Automatic Can Opener



Storage Tins



Electric Salt and Pepper Mills

Kitchen inspiration

Share your purchase with us on social media and tag
@cooksprofessional to be featured!



#cooksprofessional

We'd like to know what you think!

We'd be very grateful if you can spare a few minutes to leave us a review.
Please review on the retailer website where you placed your order.

Need help?

Our friendly customer care team work Monday to Friday.
Message us at:

care@cooksprofessional.co.uk



Follow us on Instagram