



## Electric Carving Knife Instruction Manual

**Product Code: K632**

After Sales Support  
[care@cooksprofessional.co.uk](mailto:care@cooksprofessional.co.uk)

For correct usage, please read these instructions carefully before use and keep in a safe place for future reference.

### REGISTER NOW FOR EXTENDED 2-YEAR WARRANTY

When you buy direct from the Cooks Professional website your free 2-year warranty is automatically applied upon purchase (no further action required).

If you purchased your product through a different retailer website you can register your product for an extended 2-year warranty by visiting [www.cooksprofessional.co.uk/extended-warranty](http://www.cooksprofessional.co.uk/extended-warranty) or scan the QR code.





## INTRODUCTION

### Congratulations!

You have made an excellent choice with the purchase of this quality Cooks Professional product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards, performance and safety.

We want you to be completely satisfied with your purchase, so this Cooks Professional product is backed by our comprehensive manufacturer's guarantee and an outstanding after sales service through our dedicated Customer Care team.

We hope you enjoy using your product for many years to come.

.....



 
## SAFETY WARNINGS

1. Please read these instructions carefully before using the appliance for the first time.
2. Before you connect the appliance to the mains supply, make sure that the voltage indicated on the rating plate, matches the mains voltage in your home. If it does not, contact your dealer and do not use the appliance.
3. Prevent children from pulling on the mains cord.
4. To protect against risk of electrical shock, do not put the housing in water or other liquid. Do not operate knife in water or under running water.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Disconnect when changing blades.
7. Avoid contacting moving parts.
8. Do not operate after the appliance malfunctions, or is dropped or damaged in any manner. Repairs to electrical appliance should only be performed by a qualified electrician. Improper repairs may place the user at serious risk. Return appliance to its authorised service facility for examination, repair or electrical or mechanical adjustment.
9. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
10. Do not let cord hang over edge of table or counter.
11. Blade are sharp. Handle carefully. Always handle blades with hand away from cutting edge. Use the spatula to extricate food. Always store blades with cutting edge away from you.
12. Do not contact any moving parts while the appliance is operating.
13. Make sure that the motor and blades have completely stopped before removing blades from housing.
14. The appliance is for household use only. Do not use outdoors.
15. Do not plug in the mains before the blades have been inserted.
16. Before cleaning the appliance disconnect from the power supply.
17. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
21. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
22. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

## TECHNICAL SPECIFICATIONS

Model No: K632  
Power supply: AC230V 50Hz  
Power: 45W  
Short time operation: 3-minute continuously operation limited

## KNOW YOUR APPLIANCE

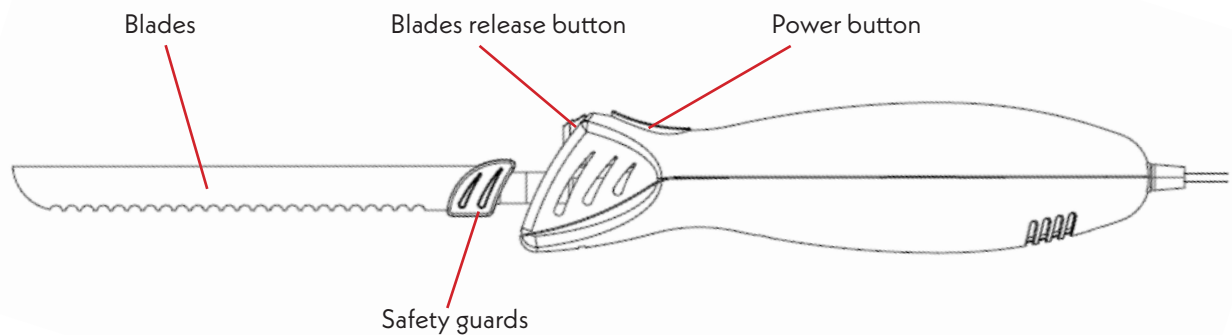

## OPERATION

**CAUTION:** Always unplug the appliance from the mains socket before inserting or removing the blades.

## BEFORE FIRST USE

Blades are sharp. Always handle with care and the sharp edges away from hand and body. Wash the blades in warm, soapy water, then dry thoroughly.

## ASSEMBLING BLADES

- Hold the blade ends by safety guards and slip the rivet on the key hole of the other blade.
- Slide blades together lightly ensuring tips are interlocked.

**WARNING:** The blades are very sharp, handle with care.



 
## INSERTING THE BLADES

- Hold Assembled blades by the safety guards and insert the blades into the blade slot pushing until both blades are locked into position – an clear “click” sound will be heard.



## INCLUDED BLADES

### Carving Knife

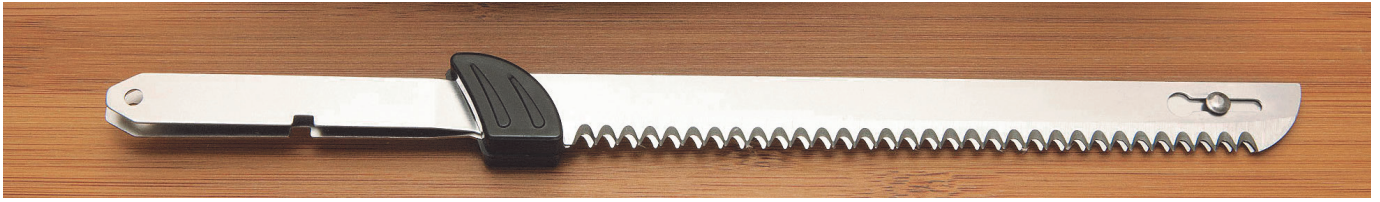

### Bread Knife



## REMOVING THE BLADES

Depress the blade release buttons with one hand, at the same time pulling the blades off with the safety guards with the other hand.

## HOW TO USE

- Assemble the blades before inserting them into the appliance.
- Connect to the mains and ensure the cord is clear from the blades.
- Make sure the blades are fixed securely.
- Holding the appliance with handle, then press the 'Power Button'. The blades will start to move for slicing.
- To turn the unit off, release the 'Power Button'. It will return to the Off position and the blades will stop moving immediately.
- When the cutting is finished, disconnect the unit from the mains.

**WARNING:** Avoid contact with the moving parts. Keeps hands, hair, and clothing away from moving blades during the operation to avoid any hazards.

**WARNING:** Never try to slice the bones. The blades are not designed to perform such operations.

**Note :** do not operate this appliance longer than 3 minutes at one time. Stop and cool then resume.

## **SLICING HINTS**

- Always place food to be sliced on a wooden or plastic cutting board. Do not slice food on glass, metal or bench tops as scratching may occur.
- Guide blades through food. A sawing action is not necessary. Do not force blades through food.
- To maintain sharpness of blades, do not cut through bones, fruit pips, stones, or any other hard substances.
- For best results when carving meat and poultry, allow cooked meat to stand for at least 10 minutes before slicing. This allows the juices to set and make carving easier and neater.
- Before carving meat or chicken, remove any skewers. If desired, string may be left around the meat while carving.
- A carving fork is recommended to use for steadying the meat and assists in carving during slicing.
- Do not attempt to sharpen blades.

## CLEANING AND MAINTENANCE

- The blades do not require any regrinding as they always remain sharp due to the constant two-way friction.
- There is no service part inside the unit. No lubrication is needed.
- Disconnect it from the mains before cleaning.
- Dismantle the blades and wash them with hot soapy water.
- Clean the housing with a damp cloth. Do not use abrasive cleaning materials.
- Do not immerse the appliance in the water or other liquid.
- Dry thoroughly before storing.





## PLUG WIRING

**THESE SAFETY INSTRUCTIONS SHOULD BE READ CAREFULLY AND KEPT IN SAFE PLACE FOR FUTURE REFERENCE.**

This appliance is fitted with a plug that complies with BS 1363. Only high quality 13A (square pin) plugs that comply with this standard should be fitted.

Wires are coloured as follows:

 
**Brown – Live**

**Blue – Neutral**

**Yellow & Green – Earth**

If the appliance is fitted with a 2-core cable it is double insulated and will not have the yellow and green earth wire.

**IT IS ESSENTIAL THAT WIRES ARE ATTACHED ONLY TO THEIR DESIGNATED POSITIONS IN THE PLUG**

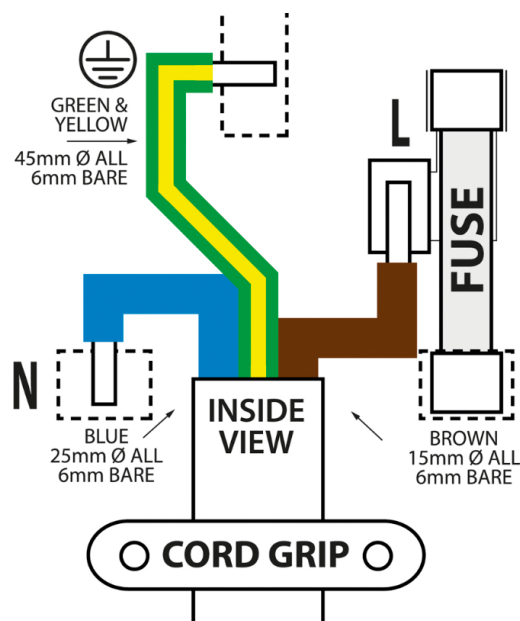

Fuses must be replaced with the same rating as the original; please refer to the fuse rating stated on the plug for this information. Only genuine fuses compliant with BS 1362 should be used.

## **GUARANTEE IMPORTANT**

Please do not return this product without first emailing our Customer Services at:

**care@cooksprofessional.co.uk**

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee. Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre. Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

## **EXTENDED 2 YEAR WARRANTY**

**WHEN YOU BUY DIRECT FROM THE COOKS PROFESSIONAL WEBSITE YOUR FREE 2 YEAR WARRANTY IS AUTOMATICALLY APPLIED UPON PURCHASE.**

If you purchased your product through a different retailer you can register your product for an extended 2-year warranty by visiting our website [www.cooksprofessional.co.uk/extended-warranty](http://www.cooksprofessional.co.uk/extended-warranty). The product must be registered, along with your contact information, within 14 days of purchase.

For full terms and conditions please visit our website.

E-mail: **care@cooksprofessional.co.uk**

Please retain for future reference.  
Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.



## More great products from Cooks Professional



Pizza Maker



Hot Water Dispenser



Sensor Recycling Bin



Mini Oven



3.5L Slow Cooker



Bamboo Chopping Boards



Air Fryer



Storage Tins



Electric Salt and Pepper Mills

*Kitchen inspiration*

Share your purchase with us on social media and tag  
**@cooksprofessional** to be featured!



**#cooksprofessional**

**We'd like to know what you think!**

We'd be very grateful if you can spare a few minutes to leave us a review.  
Please review on the retailer website where you placed your order.

**Need help?**

Our friendly customer care team work Monday to Friday.  
Message us at:

**[care@cooksprofessional.co.uk](mailto:care@cooksprofessional.co.uk)**



**Follow us on Instagram**

**K632 Electric Carving Knife Instruction Manual**

For correct usage, please read these instructions carefully  
before use and keep in a safe place for future reference.