

**COOKS**  
professional



## 34L Electric Oven with 2 Ceramic Hobs Instruction Manual

**Product Code: K761 • K762**

**After Sales Support**  
**[care@cooksprofessional.co.uk](mailto:care@cooksprofessional.co.uk)**

For correct usage, please read these instructions carefully  
before use and keep in a safe place for future reference.

### **REGISTER NOW FOR EXTENDED 2-YEAR WARRANTY**

When you buy direct from the Cooks Professional website your free 2-year warranty is automatically applied upon purchase (no further action required).

If you purchased your product through a different retailer website you can register your product for an extended 2-year warranty by visiting **[www.cooksprofessional.co.uk/extended-warranty](http://www.cooksprofessional.co.uk/extended-warranty)** or scan the QR code.



# COOKS

professional

## INTRODUCTION

Congratulations!

You have made an excellent choice with the purchase of this quality Cooks Professional product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards, performance and safety.

We want you to be completely satisfied with your purchase, so this Cooks Professional product is backed by our comprehensive manufacturer's guarantee and an outstanding after sales service through our dedicated Customer Care team.

We hope you enjoy using your product for many years to come.

---



## FOR HOUSEHOLD USE ONLY

### IMPORTANT SAFEGUARDS

**When using electric appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return the appliance to the nearest Authorised Service Centre for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven, or in a microwave oven.
9. When operating the oven, keep at least 12 cm of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use, or before cleaning. Let it to cool down before putting on or taking off parts, or before cleaning.
11. Do not cover any part of the oven with metal foil. This may cause overheating of the oven.
12. Extreme caution should be exercised when removing tray or disposing of hot grease or other hot liquids.
13. Do not clean the oven with metal scouring pads. Metal chippings would touch electrical parts, and endanger a risk of electric shock.
14. A fire may occur if the oven is covered by or placed near the flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.
15. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
16. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
17. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
18. To disconnect, turn any control to "off", then remove plug from wall outlet. Always hold the plug, but never pull the cord.
19. Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.
20. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Avoid scratching door surface or nicking edges. If the door glass has a scratch or nick, contact the nearest Authorised Service Centre for examination and repair.
21. Do not use outdoors.
22. Do not use appliance for other than intended use.
23. This appliance is for HOUSEHOLD USE ONLY.
24. The accessible surfaces are liable to get hot when the appliance is operating.
25. Glass Door cannot support goods in the fully open position.
26. The appliance is not intended to be controlled by an external timer or separate remote-control system.

27. If the surface of the hotplate is cracked, switch off the appliance to avoid the possibility of electric shock. Return appliance to the nearest Authorised Service Centre for repair.
28. Caution, hot surface! The temperature of accessible surface may be high when the appliance is in operation. Do not touch hot surfaces. Use handle or knobs.
29. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
30. Children should be supervised to ensure that they do not play with the appliance.
31. For appliance with type Y attachment, if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
32. Rear surface of appliances should be placed against a wall.

**Before using your cooker for the first time, be sure to:**

1. Read all instructions included in this manual.
2. Make sure oven is unplugged and thermostat knobs are in the off position.
3. Remove all racks and pans. Wash the racks and pans in hot soapy water or in a dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new cooker.

**When begin to use:**

1. Confirm the marked power consumption is in conformity with your household electric power.
2. Do not let cord hang over edge of table or counter to avoid that children may stumble over.
3. If the supply cord is damaged, the oven should not be used before it is repaired.
4. Oven should be sent to the manufacturer, authorised service agent or a similarly qualified person to repair in order to avoid a hazard.

**This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. An extension cord may be used if you are careful in its use:**

1. The electric rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. An extension cord with the power cord must be arranged so that it will not drape over the countertop or table top where they can be pulled on by children or tripped over accidentally.

## COMPONENTS



**Left Ceramic Hotplate (1000W/165mm):** Use for cooking various casserole dishes and other desired use.

**Right Ceramic Hotplate (700W/165mm):** Use for cooking various casserole dishes and other desired use.

 
**Control Panel:** Temperature Knob, Left Hotplate Indicator Light, Left Hotplate Dial, Right Hotplate Indicator Light, Right Hotplate Dial, Power Indicator Light, Function Knob,

**Wire Rack (357\*292mm):** For toasting, baking, and general cooking in casserole dishes and loading food tray. **Note:** Wire Rack should be positioned with the indentations pointing down.

**Food Tray (356.5\*292mm):** For use in broiling and roasting various foods that contain water or will release water or oil during cooking.

**Food Tray Handle:** Allows you to pick up Food Tray and Grill Rack to avoid any scald.

## CONTROL PANEL

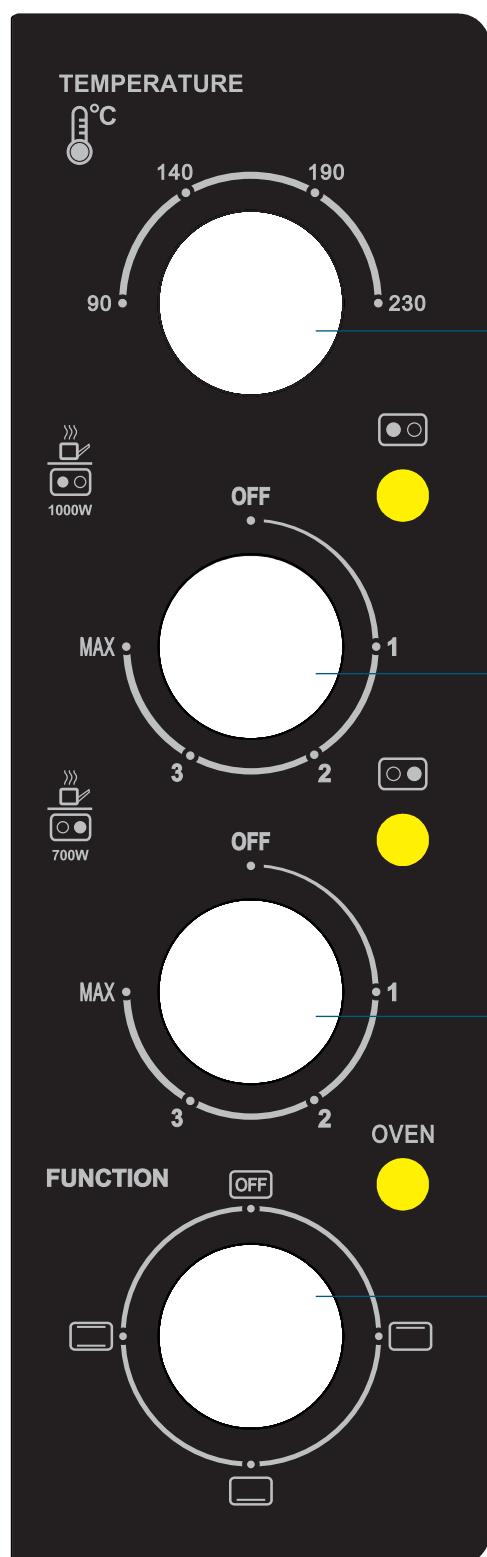

**Temperature Knob:**  
Temperature range from 90 to 230°C.

**Left Ceramic Hotplate Knob:**  
Temperature control for the left hotplate

**Right Ceramic Hotplate Knob:**  
Temperature control for the right hotplate

**Oven Function Knob: Select working modes**

-  Switch to "Off" when cooker not in use
-  Upper/Grill heating element only
-  Lower heating element only
-  Upper + Lower heating elements

## OPERATION INSTRUCTION

### Using Your Oven:

1. Plug in and switch on at power socket
2. Select oven mode with the Oven Function Knob (    )
3. Use the Temperature knob to select your desired temperature.
4. Ensure you switch the oven to the 'OFF' position when finished.

### Using Your Oven:

### Using the ceramic hotplates:

1. Plug in and switch on at power socket.
2. Turn the Hotplate Knob and select required temperature. Bear in mind the left hand hotplate is more powerful than the right hand hotplate.
3. Both Hotplates can be used at the same time.
4. Ensure you switch hotplates to the 'OFF' position when finished.

### Safety Precautions

Use the food tray handle or oven mitts to remove hot food from the oven.  
Never put plastic or paper food containers in the oven.

**Note: Maximum weight of food that can be put on either the grill rack or food tray is 3.5kg.  
Always ensure that food is distributed evenly across the rack or tray for even weight distribution.**

### CAUTION

TO AVOID RISK OF INJURY OR BURNS, DO NOT TOUCH HOT SURFACES WHEN OVEN IS IN USE. ALWAYS PAY EXTREME CARE WHEN REMOVING BAKE TRAY, WIRE RACK OR ANY HOT CONTAINER FROM A HOT OVEN. ALWAYS USE THE TRAY HANDLE, OR AN OVEN MITT WHEN REMOVING HOT ITEMS FROM THE OVEN.

## CARE & CLEANING

### ALWAYS UNPLUG OVEN AND ALLOW TO COOL BEFORE CLEANING

Clean internal walls of oven with damp cloth and warm soapy water. Use a good quality oven cleaner to help remove stubborn stains. Do not use steel wool scouring pads, abrasive cleaners or scrape walls with metal utensils as this may damage the interior. Wash all accessories in hot soapy water or in a dishwasher. Wipe the door clean with a damp cloth and wipe dry with a paper or cloth towel.

#### SPECIFICATIONS

|                               |                    |
|-------------------------------|--------------------|
| Power Consumption:            | 220-240V ~ 50/60Hz |
| Total Output Power:           | 3200W              |
| Left Hotplate(165mm) Output:  | 1000W              |
| Right Hotplate(165mm) Output: | 700W               |
| Oven Output:                  | 1500W              |
| Oven Capacity:                | 34Litres           |

#### NOTICE ABOUT RECYCLING

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste. Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products.

Please help us to conserve the environment we live in!



## PLUG WIRING

**THESE SAFETY INSTRUCTIONS SHOULD BE READ CAREFULLY AND KEPT IN SAFE PLACE FOR FUTURE REFERENCE.**

This appliance is fitted with a plug that complies with BS 1363. Only high quality 13A (square pin) plugs that comply with this standard should be fitted.

Wires are coloured as follows:

 
**Brown – Live**

**Blue – Neutral**

**Yellow & Green – Earth**

If the appliance is fitted with a 2-core cable it is double insulated and will not have the yellow and green earth wire.

**IT IS ESSENTIAL THAT WIRES ARE ATTACHED ONLY TO THEIR DESIGNATED POSITIONS IN THE PLUG**

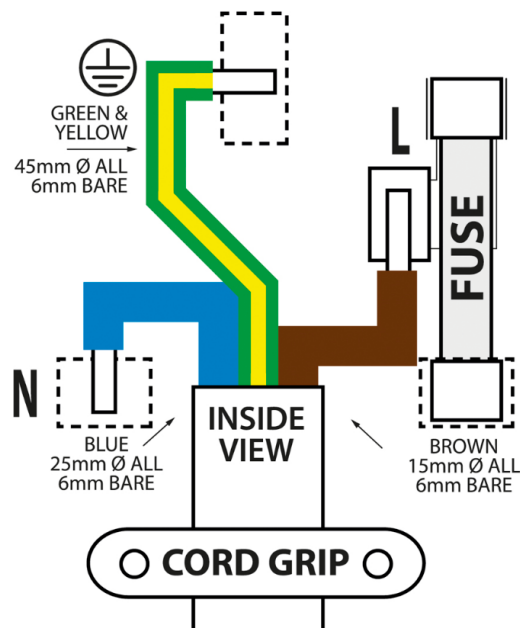

Fuses must be replaced with the same rating as the original; please refer to the fuse rating stated on the plug for this information. Only genuine fuses compliant with BS 1362 should be used.

## GUARANTEE IMPORTANT

Please do not return this product without first emailing our Customer Services at:

[care@cooksprofessional.co.uk](mailto:care@cooksprofessional.co.uk)

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee. Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre. Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

## EXTENDED 2 YEAR WARRANTY

**WHEN YOU BUY DIRECT FROM THE COOKS PROFESSIONAL WEBSITE YOUR FREE 2 YEAR WARRANTY IS AUTOMATICALLY APPLIED UPON PURCHASE.**

If you purchased your product through a different retailer you can register your product for an extended 2-year warranty by visiting our website [www.cooksprofessional.co.uk/extended-warranty](http://www.cooksprofessional.co.uk/extended-warranty). The product must be registered, along with your contact information, within 14 days of purchase.

For full terms and conditions please visit our website.

E-mail: [care@cooksprofessional.co.uk](mailto:care@cooksprofessional.co.uk)

Please retain for future reference.  
Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.



---

### Cooks Professional Limited

Unit 1  
Dolbedwyn, Newchurch  
Kington, Powys  
HR5 3QQ  
UK

[care@cooksprofessional.co.uk](mailto:care@cooksprofessional.co.uk)

### EU Responsible Person

(EU regulatory contact only)

eucomply OÜ

Pärnu mnt 139b-14

11317 Tallinn, Estonia

[hello@eucompliancepartner.com](mailto:hello@eucompliancepartner.com)

+33 757690241

 
## COOKS PROFESSIONAL 'HELP CENTRE'

Welcome to the Cooks Professional Help Centre!


Here, you'll find all the resources you need to make the most of your Cooks Professional products. Our online Help Centre is continually being updated with the latest product manuals, 'How to Use' and 'Hints & Tips' videos. Whether you're a first-time user or a seasoned cook, we have something for everyone.

Features:

**Latest Product Manuals:** Access up-to-date manuals for all our products.

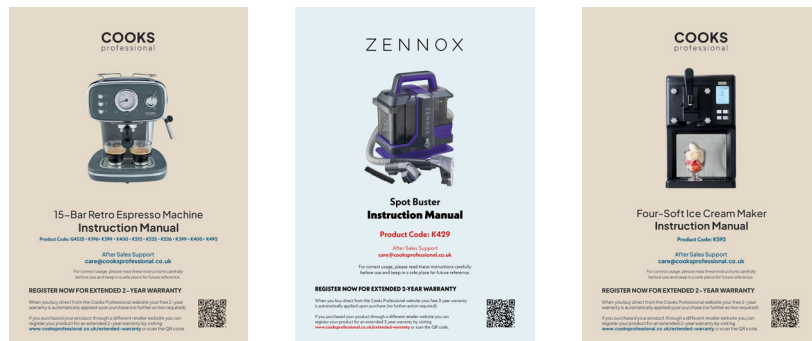

 **How to Use Videos:** Step-by-step guides to help you get started.

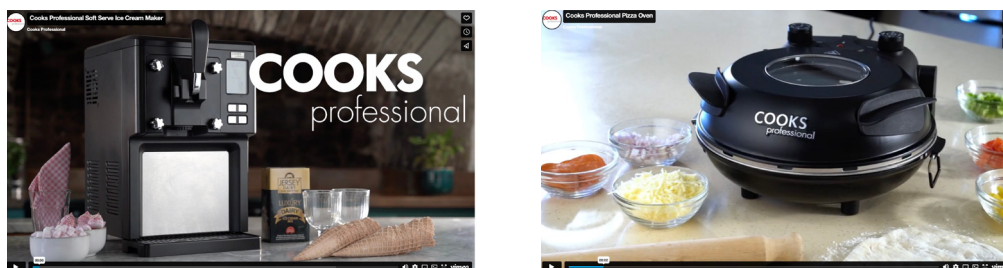

**Hints & Tips Videos:** Expert advice and creative ideas to enhance your cooking experience.

 
Visit us today and explore our comprehensive collection of resources. If you have any questions, our Customer Care team is available to assist you via Live Chat, email, or our contact form.

Scan here



[cooksprofessional.co.uk/help-centre](https://cooksprofessional.co.uk/help-centre)

Share your purchase with us on social media and tag  
**@Cooksprofessional** to be featured!

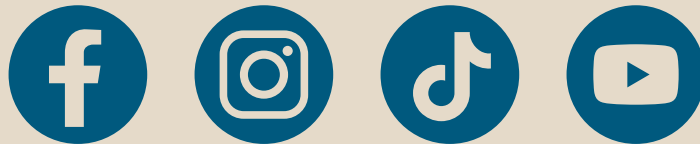

**We'd like to know what you think!**

We'd be very grateful if you can spare a few minutes to leave us a review.  
Please review on the retailer website where you placed your order.

**Need help?**

Our friendly customer care team work Monday to Friday.  
Message us at:

**[care@cooksprofessional.co.uk](mailto:care@cooksprofessional.co.uk)**



**Follow us on Instagram**

**48L Electric Oven  
K761 • K762 Instruction Manual**

For correct usage, please read these instructions carefully  
before use and keep in a safe place for future reference.