


COOKS

professional

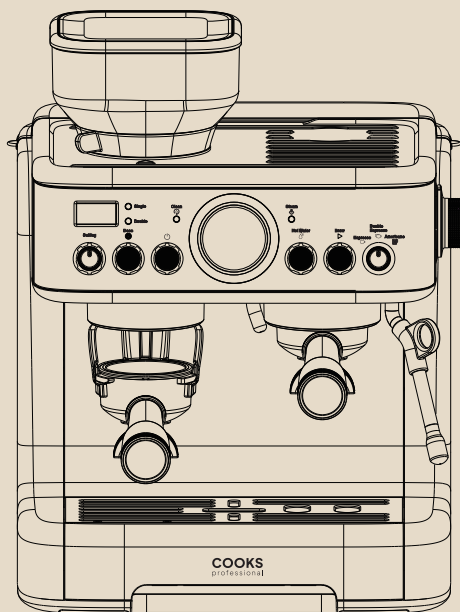

Bean to Cup Espresso Machine Instruction Manual

Product Code: K773 • K774

After Sales Support
care@cooksprofessional.co.uk

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.

REGISTER NOW FOR EXTENDED 2-YEAR WARRANTY

When you buy direct from the Cooks Professional website your free 2-year warranty is automatically applied upon purchase (no further action required).

If you purchased your product through a different retailer website you can register your product for an extended 2-year warranty by visiting www.cooksprofessional.co.uk/extended-warranty or scan the QR code.



COOKS

professional

INTRODUCTION

Congratulations!

You have made an excellent choice with the purchase of this quality Cooks Professional product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards, performance and safety.

We want you to be completely satisfied with your purchase, so this Cooks Professional product is backed by our comprehensive manufacturer's guarantee and an outstanding after sales service through our dedicated Customer Care team.

We hope you enjoy using your product for many years to come.

Specifications:

220 – 240V

Water tank capacity: 2.6L

Power: 1500w

Pressure: 20 bar



IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or personal injury, please observe the following essential safety precautions when using this household appliance:


- **Read all instructions carefully** before using the appliance.
- **Avoid direct contact with heated surfaces.** Always use handles or knobs provided. Caution: Direct contact with hot components or splashing hot liquids may result in burns.
- **To prevent electric shock**, do not immerse the power cord, plug, or the coffee machine in water or any other liquids.
- **Supervise children** when the appliance is in use or nearby. This appliance is not a toy.
- **Allow the machine to cool completely** before disassembling or cleaning any parts.
- **Operate the appliance on a stable, flat surface.** Ensure it is positioned away from edges to prevent tipping.
- **Do not operate the appliance if the power cord or plug is damaged**, if the appliance malfunctions, or if it has been dropped or damaged in any way. Please contact our customer service team for inspection, repair, or adjustment.
- **Only use accessories that are recommended or supplied by the manufacturer.** The use of unapproved accessories may cause injury.
- **For indoor use only.** Do not use the appliance outdoors.
- **Keep the power cord away from edges of tables or counters**, and do not allow it to come into contact with hot surfaces.
- Do not place the appliance on or near gas or electric stoves, or inside heated ovens.
- **Use the appliance only as intended.** Misuse may result in injury or damage.
- **Warning: To avoid the risk of fire or electric shock, do not remove the bottom cover of the coffee machine.** There are no user-serviceable parts inside. Repairs should only be carried out by authorized service personnel.
- When turning off the machine, **ensure the power switch is in the “off” position before unplugging from the outlet.**

Please retain these instructions for future reference.

ADDITIONAL SAFETY INFORMATION


- The power cord is intentionally designed to be short to reduce the risk of tripping or entanglement.
- To avoid overloading your electrical circuit, do not operate this appliance on the same outlet as other high-wattage devices.

CONTROL PANEL

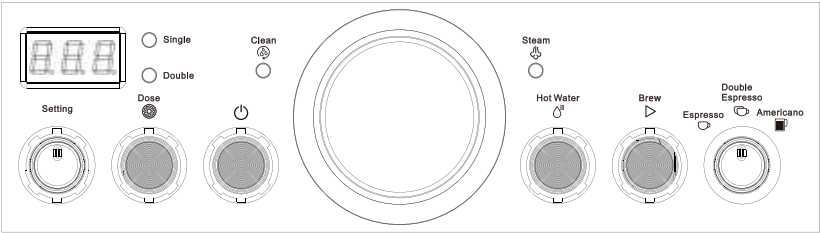


Icon	Name	Function	Icon	Name	Function
	Power Button	Press the Power button to turn the machine on. To activate the cleaning mode, press and hold the button for 5 seconds.		Setting Knob	Rotate the Setting knob left or right to adjust functions such as time, temperature, and water volume. Press the knob to confirm your selection and move to the next setting option.
	Dose Button	When the machine is powered on, press the Dose button to select the desired coffee volume: single cup or double cup.		Hot Water Button	Hot water cannot be dispensed during preheating. Once preheating is complete, press the Hot Water button to start the hot water function. Press the button again to stop the flow.
	Coffee selection knob	This three-position knob allows you to choose your coffee type: • Left - Single espresso • Middle - Double espresso • Right - Americano Note: Once the Brew button is pressed, this knob will be temporarily disabled.		Brew Button	After selecting your desired coffee type using the Coffee Selection Knob, press the Brew button to begin brewing.
	Steam Knob	After the machine has finished preheating, turn the Steam knob to begin steam preheating. The steam indicator light will flash during this process. When the light stops flashing and is illuminated, steam will automatically be released. To stop the steam, turn the Steam knob back to the off position. If not manually turned off, the steam function will stop automatically after 2 minutes. Important: The Steam knob must be manually turned off before the steam function can be used again.		LED Screen	• In Grind Mode, displays the grinding time • In Brew Mode, displays the brewing time • In Hot Water Mode, shows the water temperature (default: 80°C)

 ACCESSORIES

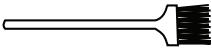Part Name	Picture	How to Use
Small Cleaning Brush - For cleaning the grind outlet channel		For cleaning the grind outlet channel 
Big Cleaning Brush - For cleaning the grinding cavity		For cleaning the grinding cavity 
Tamper - For tamping ground coffee before brewing. Always tamp coffee level in the filter.		For tamping ground coffee before brewing. Always tamp coffee level in the filter. 
Single and Double filter baskets		
Milk Jug		



COMPONENTS

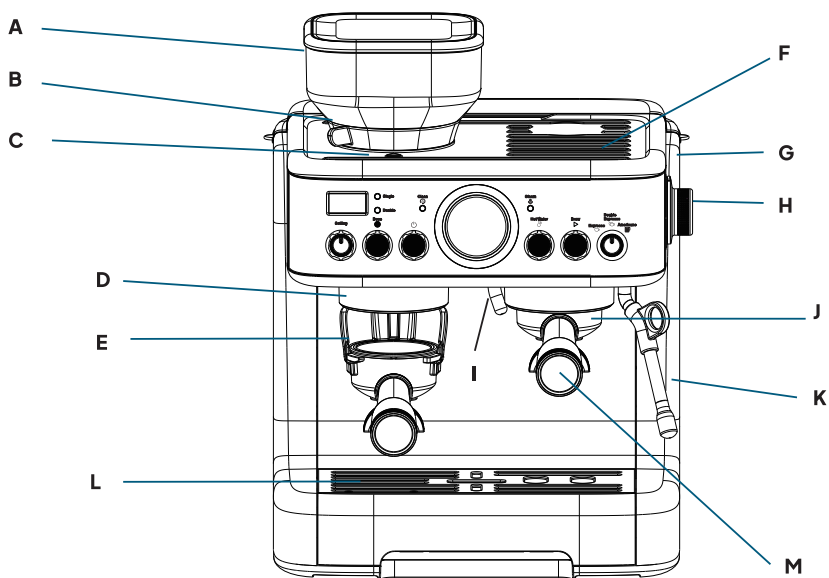

Machine Components:

- A 280g Bean hopper
- B Grind size selector
- C Integrated conical burr grinder
- D Grind outlet
- E Grinding cradle
- F Cup warmer
- G 2.6L Water tank
- H Steam dial
- I Hot water outlet
- J Group head
- K Steam wand
- L Drip tray
- M Portafilter

SETUP & INSTALLATION

1. Clean the water tank before first use.
2. Fill with water do not exceed the 'MAX' line.
3. Insert the tank securely until it clicks into place.

Tip: Ideally use filtered tap water – unfiltered can affect taste and lead to limescale. Refresh daily for best results.

BEAN HOPPER

1. Clean the bean hopper before use.
2. Align the 'unlock' icon on the hopper with the matching icon on the machine.
3. Rotate counter-clockwise until you hear a click and the 'lock' icon aligns.
4. Fill with fresh, whole coffee beans. Do not use pre-ground coffee.
5. Ensure the internal hopper gate switch is facing forward (open) before grinding.
6. Before removing the hopper, turn the switch to close the bean chute – this prevents beans spilling out.

If the bean hopper is not installed correctly, grinding will be disabled. The dose button light will turn red to reflect this.

GRINDING FUNCTION

Using the Grinder

- The machine defaults to single-shot grind mode.
- The Single Shot light will illuminate and the LED screen displays the grind time.
- Press the Dose button to toggle between Single and Double mode (light will update accordingly).

Grinding Your Beans

1. Insert the portafilter into the grind cradle.
2. The machine detects the portafilter and automatically starts grinding.
3. The dosing light illuminates and the digital screen begins the countdown.
4. When the time ends, grinding stops automatically.
5. You can pause mid-grind by removing the portafilter – reinserting it resumes grinding from the remaining time.



ADJUSTING GRIND TIME

Default Grind Time is 7 seconds for Single and 14 seconds for Double

1. Select Single or Double Shot via the Dose button.
2. Rotate the Setting Knob to choose a grind time (0–30 seconds).
3. Press the Setting Knob again to save and exit.

You will need to dial in the machine to suit your chosen coffee beans. Bean grind will vary according to specific variety, roast and freshness.

High quality fresh beans will produce the best results.

HOT WATER FUNCTION

Dispensing Hot Water

- Available after the machine has fully preheated.
- Press the Hot Water button to begin dispensing hot water. The light flashes white and the digital display shows 80°C. This is the default hot water temperature.
- Press Hot Water again to stop.

The Brew button is disabled during hot water use.

CUSTOMISING HOT WATER SETTINGS

1. After preheating, press and hold the Hot Water button for 3 seconds.
2. **Volume Setting:**
 - Brew & Setting lights flash.
 - Screen displays 100ml (default).
 - Adjust using the Setting Knob (50–200ml).
 - Press the Setting Knob to confirm.
3. **Temperature Setting:**
 - Screen displays 80°C (default).
 - Adjust with Setting Knob (60–85°C).
 - Press the Setting Knob to confirm and exit.



BREW FUNCTION

Brewing Espresso or Americano

- Once the machine is fully preheated, Brew and Hot Water lights will illuminate.
- Use the Coffee Selection Knob to choose:
Left: Single Espresso
Middle: Double Espresso
Right: Americano
- Press the Brew button to start brewing.
- The LED display shows a countdown timer.

ESPRESSO SETTINGS (Single/Double)

To customise espresso settings:

1. Select Single or Double espresso on the Coffee Selection Knob.
2. Press and hold the Brew button for 3 seconds.

Setting Sequence (displayed in LED screen):

1. Pre-Infusion Time
 - Default: 3 sec (range: 0–10 sec)
2. Pre-Infusion Water Volume
 - Default: 15ml (Single), 20ml (Double) (range: 10–80ml)
3. Brew Volume
 - Default: 35ml (Single), 75ml (Double) (range: 20–200ml)
4. Brew Temperature
 - Default: 92°C (range: 88–96°C)

Use the Setting Knob to adjust each step, pressing to confirm and move to the next.



AMERICANO SETTINGS

To customise Americano brewing settings:

1. Select Americano on the Coffee Selection Knob.
2. Press and hold the Brew button for 3 seconds.

Setting Sequence:

1. Pre-Infusion Time (range: 0–10 sec)
2. Pre-Infusion Water Volume (range: 10–80ml)
3. Espresso Brew Volume (range: 5–200ml)
4. Espresso Brew Temperature (range: 88–96°C)
5. Americano Water Volume
 - Default: 100ml (range: 50–200ml)
6. Americano Water Temperature
 - Default: 80°C (range: 60–85°C)

Follow prompts, use the Setting Knob to adjust, and press to confirm each setting.

CLEANING FUNCTION

After 500 espresso extractions, the Cleaning light flashes white.

To clean:

1. Power off the machine.
2. Add a suitable descaling agent to the water tank.
3. Press and hold the Power button for 5 seconds.
4. The machine flushes:
 - Hot Water System
 - Brew Group
 - Steam Circuit
5. The machine returns to standby and resets the counter.

Run another cycle with clean water to flush out descaling solution residue.

You can cancel mid-cleaning by pressing the Power button (but it won't reset the counter).

TROUBLESHOOTING & ERROR CODES

Issue	Description	Solution
NTC Sensor Fault	Red Power light for 0.5s + long buzzer	Contact customer support
Missing Bean Hopper	Dose button glows red, grinding disabled	Reinstall hopper correctly
Overtemperature Alert	Hot Water, Brew & Coffee Selection lights flash red	Press Hot Water to flush and cool boiler for 10 seconds. Machine is cooled again when lights turn white.
Water Tank Empty	Hot Water & Brew lights flash red	Refill water tank

FACTORY RESET

- To restore all settings:
- Press and hold the Dose, Hot Water, and Brew buttons simultaneously for 3 seconds.
 - The machine will beep to confirm reset.



GUARANTEE IMPORTANT

Please do not return this product without first emailing our Customer Services at:

care@cooksprofessional.co.uk

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee. Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre. Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

EXTENDED 2 YEAR WARRANTY

WHEN YOU BUY DIRECT FROM THE COOKS PROFESSIONAL WEBSITE YOUR FREE 2 YEAR WARRANTY IS AUTOMATICALLY APPLIED UPON PURCHASE.

If you purchased your product through a different retailer you can register your product for an extended 2-year warranty by visiting our website www.cooksprofessional.co.uk/extended-warranty. The product must be registered, along with your contact information, within 14 days of purchase.

For full terms and conditions please visit our website.

E-mail: care@cooksprofessional.co.uk

Please retain for future reference.
Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.



PLUG WIRING

THESE SAFETY INSTRUCTIONS SHOULD BE READ CAREFULLY AND KEPT IN SAFE PLACE FOR FUTURE REFERENCE.

This appliance is fitted with a plug that complies with BS 1363. Only high quality 13A (square pin) plugs that comply with this standard should be fitted.

Wires are coloured as follows:


Brown – Live

Blue – Neutral


Yellow & Green – Earth

If the appliance is fitted with a 2-core cable it is double insulated and will not have the yellow and green earth wire.

IT IS ESSENTIAL THAT WIRES ARE ATTACHED ONLY TO THEIR DESIGNATED POSITIONS IN THE PLUG

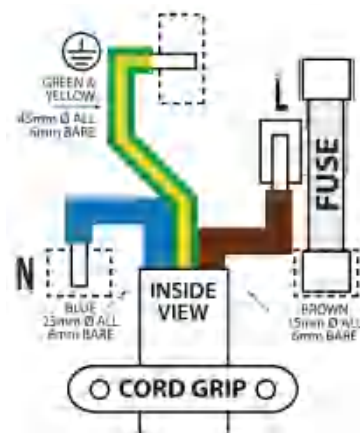

Fuses must be replaced with the same rating as the original; please refer to the fuse rating stated on the plug for this information. Only genuine fuses compliant with BS 1362 should be used.

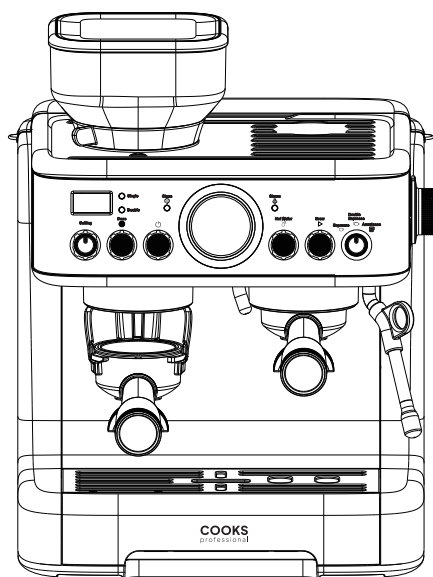


COOKS PROFESSIONAL ‘HELP CENTRE’

Welcome to the Cooks Professional Help Centre!


Here, you'll find all the resources you need to make the most of your Cooks Professional products. Our online Help Centre is continually being updated with the latest product manuals, 'How to Use' and 'Hints & Tips' videos. Whether you're a first-time user or a seasoned cook, we have something for everyone.

Features:

Latest Product Manuals: Access up-to-date manuals for all our products.

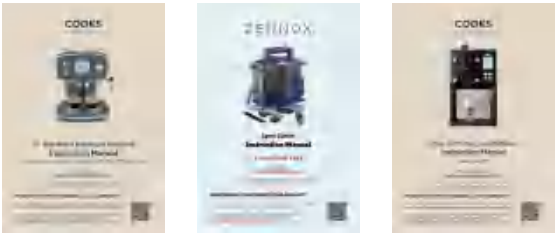

How to Use Videos: Step-by-step guides to help you get started.

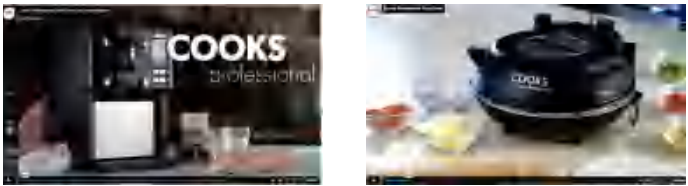

Hints & Tips Videos: Expert advice and creative ideas to enhance your cooking experience.

Visit us today and explore our comprehensive collection of resources. If you have any questions, our Customer Care team is available to assist you via Live Chat, email, or our contact form.

Scan here



cooksprofessional.co.uk/help-centre



Share your purchase with us on social media and tag
@Cooksprofessional to be featured!



#cooksprofessional

We'd like to know what you think!

We'd be very grateful if you can spare a few minutes to leave us a review.
Please review on the retailer website where you placed your order.

Need help?

Our friendly customer care team work Monday to Friday.
Message us at:

care@cooksprofessional.co.uk



Follow us on Instagram

**Bean to Cup Espresso Machine
K773 • K774 Instruction Manual**

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.