
COOKS
professional

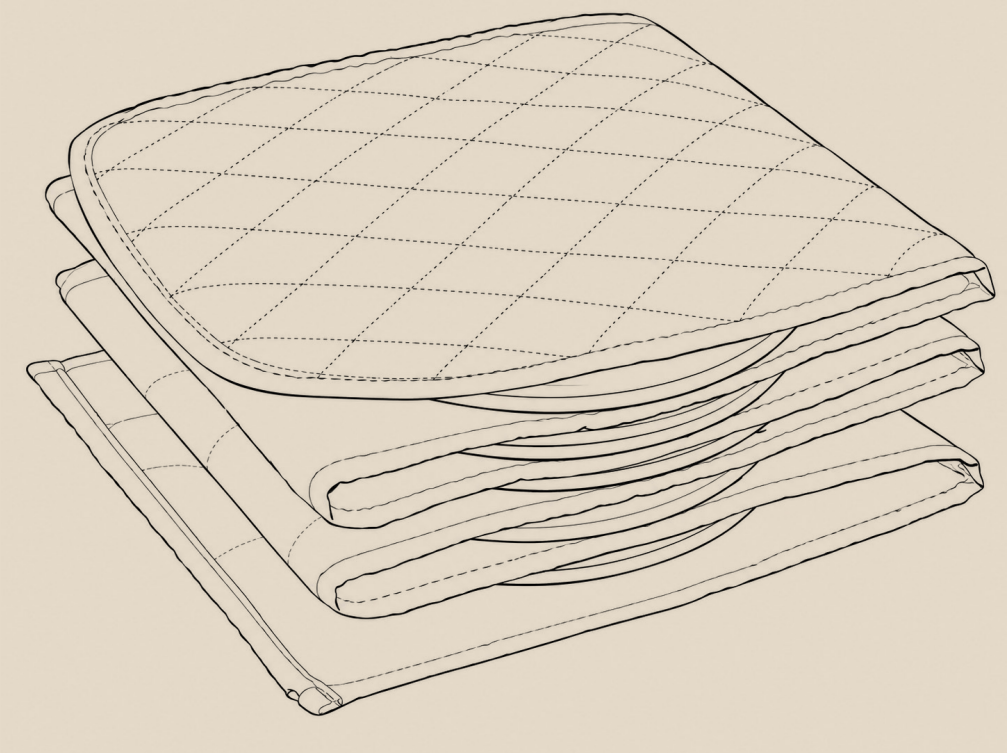

Electric Plate Warmer
Instruction Manual

Product Code: K1093 • K1094

After Sales Support
care@cooksprofessional.co.uk

For correct usage, please read these instructions carefully before use and keep in a safe place for future reference.

REGISTER NOW FOR EXTENDED 2-YEAR WARRANTY

When you buy direct from the Cooks Professional website your free 2-year warranty is automatically applied upon purchase (no further action required).

If you purchased your product through a different retailer website you can register your product for an extended 2-year warranty by visiting **www.cooksprofessional.co.uk/extended-warranty** or scan the QR code.

V1: 07/26

COOKS
professional

INTRODUCTION

Congratulations!

You have made an excellent choice with the purchase of this quality Cooks Professional product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards, performance and safety.

We want you to be completely satisfied with your purchase, so this Cooks Professional product is backed by our comprehensive manufacturer's guarantee and an outstanding after sales service through our dedicated Customer Care team.

We hope you enjoy using your product for many years to come.

TECHNICAL SPECIFICATIONS

Model:	K1093 / K1094
Size:	198 x 30 cm
Voltage:	220–240V ~ 50/60Hz
Power:	200W
Maximum plate temperature:	approx. 70°C

IMPORTANT INFORMATION – RETAIN FOR FUTURE USE

Read this manual thoroughly before first use. It contains important information for your safety, as well as for the use and care of the appliance.


Not suitable for children under 3 years


Do not use folded or rucked up


Do not insert pins


Cover only - machine washable at 30°C


Do not tumble dry


Do not dry clean


Do not bleach


Do not iron

SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and keep them for future reference.

- Only use the power cable supplied. Protect the appliance from damp, moisture and high temperatures, including direct sunlight.
- Place the plate warmer on a heat-resistant, flat and stable surface. Do not place it near hobs, gas flames or other sources of heat, and leave enough space above and below it to prevent overheating.
- Always make sure the heating element lies unfolded and flat inside the cover before use.
- Do not use the appliance folded, creased or rucked up.
- Do not insert pins or needles into the appliance, scratch the cover with sharp objects, or use excessive force. Avoid knocks and drops.
- Avoid creasing or squashing the power cable, and keep it away from sharp edges and hot surfaces.
- Before each use, check the appliance for visible damage. Do not use it if it, the cable or the plug are damaged. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person to avoid a hazard.
- Do not attempt to modify or repair the appliance yourself.
- Only connect the appliance to the supply voltage shown on the rating label.
- Only use the appliance under supervision. In the event of a malfunction, disconnect it from the mains for at least 3 seconds.
- Unplug the appliance when not in use for long periods, or when leaving the house, to prevent fire.
- Keep the appliance out of reach of children, and of anyone with reduced physical or mental capabilities or who is sensitive to heat. Children must not play with the appliance, and cleaning or maintenance must not be carried out by children without supervision.
- Do not use the appliance when wet, and do not use it with any other heating device.
- Arrange the cable and control unit carefully - loose cables can cause entanglement, strangulation, tripping or treading hazards.
- Examine the appliance regularly for signs of wear or damage. If you find any, or if it has been misused, return it to the supplier before using it again.
- Do not place any heavy objects on top of the appliance.
- This appliance is for indoor, domestic use only.

HOW TO USE

Before First Use

- Fully unwind the cable and check it for damage. Do not use the appliance if the cable or plug are damaged - contact our After Sales Support team for advice.
- Wipe the cover with a slightly damp cloth before first use.
- Check that the heating element lies unfolded and flat inside the cover.

Using Your Plate Warmer

1. Place the plate warmer on a flat, heat-resistant surface - never on textiles or heat-sensitive surfaces.
2. Place 1–2 plates between each folded layer of the cover. Important: always put at least one plate in every folded layer to prevent overheating.
3. Make sure the power cable is not lying inside or on top of the cover, then plug it into the mains.
4. Your plates will warm to approximately 70°C. Heating speed and maximum temperature will vary depending on the size, thickness, number and material of your plates.
5. Once the plates are warm, unplug the appliance at the socket.
6. Use oven gloves or a cloth to remove the warm plates, and stand them on a heat-resistant surface or a mat - not directly on textiles.
7. Unfold the plate warmer and allow it to cool completely before storing.

CLEANING AND MAINTENANCE

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Open the two hook-and-loop fasteners and remove the heating element from the textile cover.
3. Wipe the heating element with a slightly damp cloth only. Never use chemical cleaners, and never immerse it in water.
4. Machine wash the cover at a maximum of 30°C with a mild detergent. Do not tumble dry, dry clean, bleach or iron. Rinse and dry thoroughly.
5. Make sure the cover is completely dry before refitting it, positioning it so the product label on the heating element faces the insulation layer of the cover.
6. Store the appliance in a clean, dry place, and make sure it is dry before folding.

Warning: Only the textile cover may be washed. Never immerse the complete plate warmer in water or any other liquid.

PLUG WIRING

THESE SAFETY INSTRUCTIONS SHOULD BE READ CAREFULLY AND KEPT IN SAFE PLACE FOR FUTURE REFERENCE.

This appliance is fitted with a plug that complies with BS 1363. Only high quality 13A (square pin) plugs that comply with this standard should be fitted.

Wires are coloured as follows:


Brown – Live

Blue – Neutral

Yellow & Green – Earth

If the appliance is fitted with a 2–core cable it is double insulated and will not have the yellow and green earth wire.

IT IS ESSENTIAL THAT WIRES ARE ATTACHED ONLY TO THEIR DESIGNATED POSITIONS IN THE PLUG

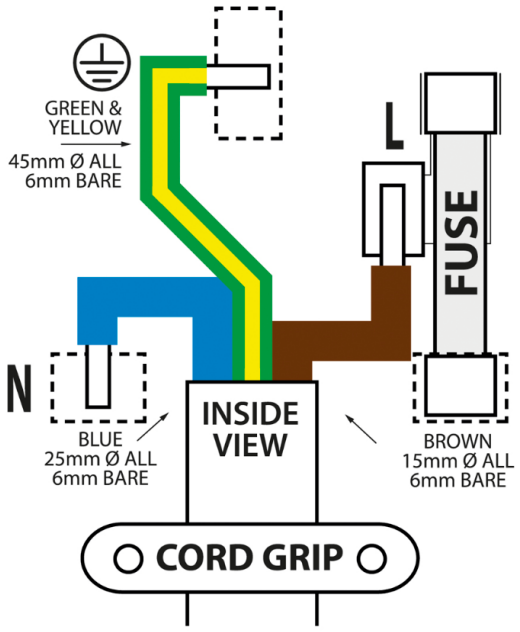

Fuses must be replaced with the same rating as the original; please refer to the fuse rating stated on the plug for this information. Only genuine fuses compliant with BS 1362 should be used.

GUARANTEE IMPORTANT

Please do not return this product without first emailing our Customer Services at:

care@cooksprofessional.co.uk

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee. Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre. Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

EXTENDED 2 YEAR WARRANTY

WHEN YOU BUY DIRECT FROM THE COOKS PROFESSIONAL WEBSITE YOUR FREE 2 YEAR WARRANTY IS AUTOMATICALLY APPLIED UPON PURCHASE.

If you purchased your product through a different retailer you can register your product for an extended 2–year warranty by visiting our website **www.cooksprofessional.co.uk/extended-warranty**. The product must be registered, along with your contact information, within 14 days of purchase.

For full terms and conditions please visit our website.

E-mail: **care@cooksprofessional.co.uk**

Please retain for future reference.
Colours and contents may vary.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Please note that all products with the symbol below must be recycled.




EU Responsible Person
(EU regulatory contact only)
eucomply OÜ
Pärnu mnt 139b-14
11317 Tallinn, Estonia
hello@eucompliancepartner.com
+33 757690241

COOKS PROFESSIONAL ‘HELP CENTRE’

Welcome to the Cooks Professional ‘Product Help’ resource centre!

Visit the Cooks Professional website and search for the product you need help with. At the bottom of the product page you’ll find the ‘Product Help’ section.


Here, you’ll find all the resources you need to make the most of your Cooks Professional products. Our online ‘Product Help’ resources are continually being updated with the latest product manuals, ‘How to Use’ and ‘Hints & Tips’ videos. Whether you’re a first-time user or a seasoned cook, we have something for everyone.

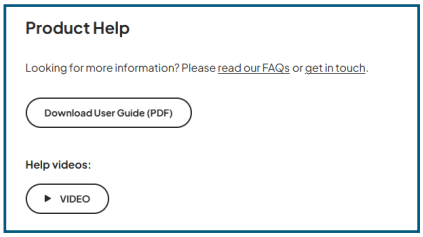

Features:

Latest Product Manuals: Access up-to-date manuals for all our products.



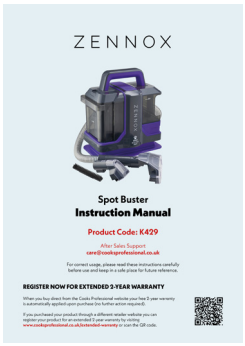



How to Use Videos: Step-by-step guides to help you get started.





Hints & Tips Videos: Expert advice and creative ideas to enhance your cooking experience.

Visit us today and explore our comprehensive collection of resources. If you have any questions, our Customer Care team is available to assist you via Live Chat, email, or our contact form.

Scan here →

cooksprofessional.co.uk

Share your purchase with us on social media and tag
@Cooksprofessional to be featured!

We'd like to know what you think!

We'd be very grateful if you can spare a few minutes to leave us a review.
Please review on the retailer website where you placed your order.

Need help?

Our friendly customer care team work Monday to Friday.
Message us at:

care@cooksprofessional.co.uk

Follow us on Instagram

Electric Plate Warmer
K1093 • K1094 Instruction Manual

For correct usage, please read these instructions carefully
before use and keep in a safe place for future reference.